

www.kisane.com

Kisan Electronics Co., Ltd.

# K6 User Manual

(Operation Manual)

Ver. 1.1



## Table of Contents

<b>1. Introduction</b> .....	4
<b>2. Summary</b> .....	5
<b>2.1. Product overview, main functions and precautions</b> .....	5
<b>2.2. Product composition and functions</b> .....	8
▶ <b>Entire product composition</b> .....	8
▶ <b>Main module</b> .....	9
▶ <b>Expansion module</b> .....	12
▶ <b>Strapper module</b> .....	12
<b>2.3. Basic screen composition and functions</b> .....	13
▶ <b>Initial screen</b> .....	13
▶ <b>Menu screen</b> .....	14
<b>3. Counting Function</b> .....	16
<b>3.1. Basic settings and operation</b> .....	16
▶ <b>Language setting</b> .....	16
▶ <b>Currency setting</b> .....	18
▶ <b>Count mode setting</b> .....	19
<b>3.2. Denomination Count</b> .....	21
▶ <b>Operation method</b> .....	21
<b>3.3. Normal Deposit</b> .....	23
▶ <b>Operating method</b> .....	23
▶ <b>Envelope Deposit</b> .....	29
▶ <b>Balance</b> .....	32
▶ <b>Single Deposit</b> .....	38
<b>3.4. Batch Card Deposit</b> .....	42

▶ Batch Card .....	42
▶ Operating method .....	44
▶ Batch card function setting .....	47
3.5. Free Count .....	51
▶ Operating method .....	52
3.6. Additional settings and operations.....	53
▶ Deposit Option.....	53
▶ Fitness Level.....	55
▶ Assign Pocket.....	56
▶ Batch Setting.....	63
4. Verify Count Information .....	66
4.1. Count Data .....	66
▶ Total.....	67
▶ Serial No.....	68
▶ Deposit Search .....	72
▶ Count History .....	75
4.2. Main Menu .....	77
▶ Count Detail.....	77
▶ Print.....	80
▶ Clear .....	83
5. Maintenance .....	84
5.1. Daily check .....	84
5.2. Cleaning .....	85
▶ Hopper Cleaning .....	85
▶ Cleaning inside Reco Unit.....	86
▶ Cleaning banknote input path (top/bottom) .....	87

<b>6. Troubleshooting</b> .....	88
<b>6.1. Check and handle errors (Data)</b> .....	88
▶ <b>Error Log</b> .....	89
▶ <b>Error processing</b> .....	91
▶ <b>Strapper related error explanation and action guide</b> .....	93
▶ <b>Error Code Table</b> .....	94
<b>6.2. Causes and solutions of major problems</b> .....	100
▶ <b>If the device does not run</b> .....	100
▶ <b>In the event of jam</b> .....	100
▶ <b>When a large amount of reject occurs</b> .....	101
▶ <b>Fly-Out</b> .....	105
▶ <b>Strapper error</b> .....	106

## 1. Introduction

**K6** has been designed to classify each denomination as well as currency by type. It has been also designed to make banknote management more efficient by performing sorting, counting, and settlement according to the fitness of banknotes as well as counterfeit banknotes.

- This Operation Manual is for users and describes **the product configuration (part name), operating method, and troubleshooting**.  
If you read the operation manual carefully before using the product, you can use the product more efficiently.
- Since this manual contains **safety related information**, be sure to read the manual before using the product
- Keep the Operation Manual in an easily accessible place so you can see it again.
- This manual is subject to change without prior notice due to circumstances, and there may be slight differences between the contents of the manual and the actual product
- This product and the operation manual, as well as the accompanying materials (information), may not be reproduced or used for any commercial purpose without prior permission

Thank you for using K6.

## 2. Summary

### 2.1. Product overview, main functions and precautions

#### ▶ Product overview

K6 has been designed to be used in offices handling large amounts of cash, such as cash-in-transit companies, cash processing centers and casinos etc.

This product distinguishes the currency, the denomination (amount), and the status of denominations, and can also determine the authenticity.

#### ▶ Main functions

This product performs the following main functions:

- (1) Counts banknotes (Total Note Count).
- (2) Classifies banknotes by currency and denomination
- (3) Sorts banknotes according to the degree of contamination (Fitness Mode)
- (4) Identifies authentic / counterfeit banknotes

#### ▶ Handling precautions

The following contains information to ensure user's safety and prevent device failure.

Please read and follow carefully.

- To prevent product malfunction or performance degradation, do not use the product under the following conditions:
  - (1) High temperature (above 45°C) or low temperature (below -10°C)
    - ※ Proper use temperature: 10~35°C, storage temperature: -10~45°C
  - (2) A place under direct sunlight
  - (3) A wet or dusty place ※ Proper humidity: 20~90% RH
  - (4) A place where chemicals or corrosive gases are used
- If the product is left for more than 2 hours at a temperature below 15°C while the product is turned off, turn on the power and wait for at least 10 minutes before operating.
- You can use this product with 100~240V, 50/60Hz power. Please check the voltage and frequency of the power source to be used.
- Do not open the cover of the Reco Unit and look into it while the product is on.
- Close all doors and covers before operating the product.
- If you open or close the door and cover roughly, strong impact may be applied to the

product, which may cause malfunction or deterioration.

- Do not touch the screen (touch panel) with a pen or a sharp object. The touch panel may be damaged.
- When handling a banknote jam, look closely at the banknote transfer path and around the gate where the banknote jam occurred, and remove any banknotes related to the jam.
- Do not use hard brushes, detergent, benzene, thinner, acid or boiling water for cleaning. Discoloration or rust may occur.
- Be sure to turn off the power and unplug the machine during inspection.
- Long-term use may cause dirt or debris to attach to the sensor and cause errors.
- Remove any foreign substances from the sensor with a brush.
- Never place close to a firearm, such as a stove or heater.
- Never disassemble or repair arbitrarily. This may cause an accident.
- Never place any heavy objects or liquids, such as beverages, on the product.
- Ground safely when using an absolute plug.
- Electrical short circuit may cause electric shock. When replacing a fuse, turn off the power when putting your hand into the machine, for example.
- Hold the wires and do not unplug them. This can cause electric shock and fire.
- Never leave the product in a dusty place to prevent dirt or debris from entering the product.
- Also, do not place them in unstable or rocking areas.
- If storing for a long time, keep it covered.
- Never use badly damaged bills, such as bills mixed with foreign substances, wet bills, etc.
- Be careful not to let hands or foreign objects, such as hair, enter the banknotes.
- Make sure that any folded or crooked banknotes are straightened out.
- Make sure the banknotes are aligned correctly and placed on the hopper.


► **Product specification**

Items	Details	Unit	Remarks
Appearance size	Main : 731(W) x 534(H) x 392(D) Expansion : 276(W) x 348(H) x 392(D) Strapper : 307(W) x 432(H) x 450(D)	mm	1 expansion module has 2 pockets.
Number of pockets	Main 4+2, Ext. 2~12 (6 modules)		
Weight	Main(55), Expansion(10), Strapper(30 )	Kg	
Hopper capacity	1,000	Sheet	
Pocket capacity	Max. 500	Sheet	
Reject pocket capacity	Reject 1 : 100, Reject 2 :200	Sheet	
Input speed	1,000 / 800 (optional)	Sheet/ minute	
Normal Count	1,000		
Value Count	1,000		
Fitness Sorting	1,000		
S/N Reading	1,000		
Handling banknotes	Size: Short side 42~110, long side 90~180 Batch card, casino ticket	mm	
Main Functions	Multi Curr. 20 Auto, Mix, Batch Card Face & Orientation, S/N OCR, Fitness		
Sensor	Dual CIS, UV, MG(18ch), IR, US		
Transferring method	Friction roller		
OS	Linux		
Display	7" LCD (Touch Panel)	Inch	
Noise	72 or less	dB	
Product life	5	Year	
MTTR	< 0.5	Hour	
MTBF	> 1,000	Hour	
Port	USB: 1, LAN: 2, Serial RS-232: 4		
Options & Special Features	Dual Pocket Extendable Structure, Interactive Pocket Structure, Batch Card support, Support External Data Screen		
Power used	100~240V, 50/60Hz	V, Hz	
Use environment	Operating temperature: 10~35°C, humidity: 20~90% RH		
Product certification	CE, CCC, GOST,		
Environmental certification	RoHS, WEEE,		



## 2.2. Product composition and functions

### ► Entire product composition

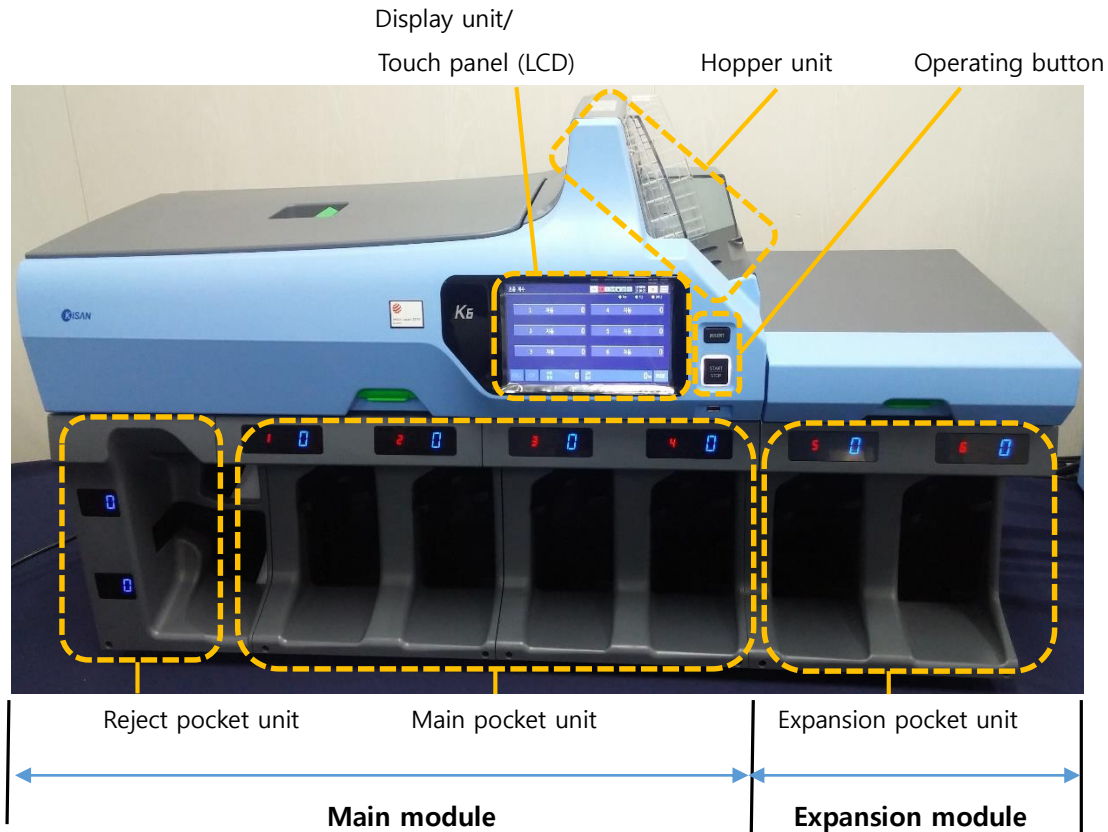


- **Main Module:** This is the basic module of this product.
  - (1) Hopper unit: This is the part where banknotes are inserted.
  - (2) Display (LCD) unit: You can check the device status (counting, error, etc.) and operate the device with the touch panel.
  - (3) Operating button: It is a button to operate the device. There are Insert and Start/Stop buttons.
  - (4) Reco unit: Equipped with various types of sensors, it reads the sensor signal for the inserted banknotes and performs banknote identification such as denomination recognition, double ticket detection, counterfeit detection, and square classification etc..
  - (5) Pocket/Stacker unit: This is where banknotes are sorted out and consists of 4 pockets.
  - (6) Reject pocket unit: This is where non-sortable banknotes come out, and consists of two pockets.
  
- **Expansion Module:** This module is used by connecting to the main module.
  - (7) Expansion pocket unit: It consists of two pockets, and the functions are the same as

those of the main module.

※ The expansion module can be expanded in 2 pocket units, and up to 6 modules can be connected and used.

## ► Main module


### • Front

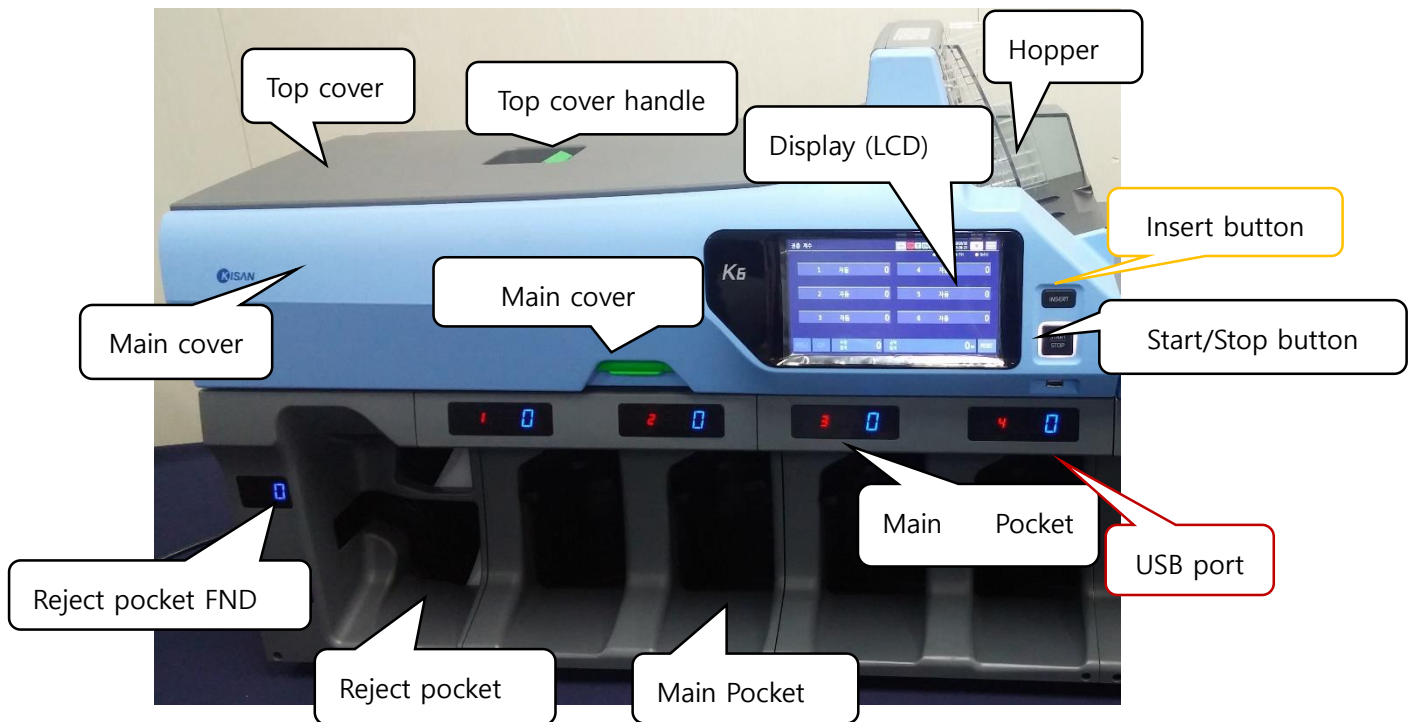


- Hopper/Insert unit: When banknotes are put, one sheet is inserted at a time.
- Operating button: A button to operate the device.
  - (1) Insert button: Operate to move the pusher up/down. Each time you press the button, the pusher moves.
  - (2) Start/Stop button: You can insert banknotes manually or stop the machine.
- USB port: A USB device connection port. It is used for various log and data backup and program upgrade.
- Display/touch panel (LCD): You can check the device status (count, error, etc.) and operate the device with the touch panel.
- Top cover: Open the cover to check the feeding path on the top of the machine.
- Top cover handle: Used to open the top cover.
- Main cover: Open the cover to check the feeding path in the center of the machine.
- Main cover handle: Used to open the main cover.

- Pocket (Main/Reject): Loads counted banknotes neatly by type.
- Pocket FND(Main/Reject): Displays pocket number and count information.

- **Side (left)**

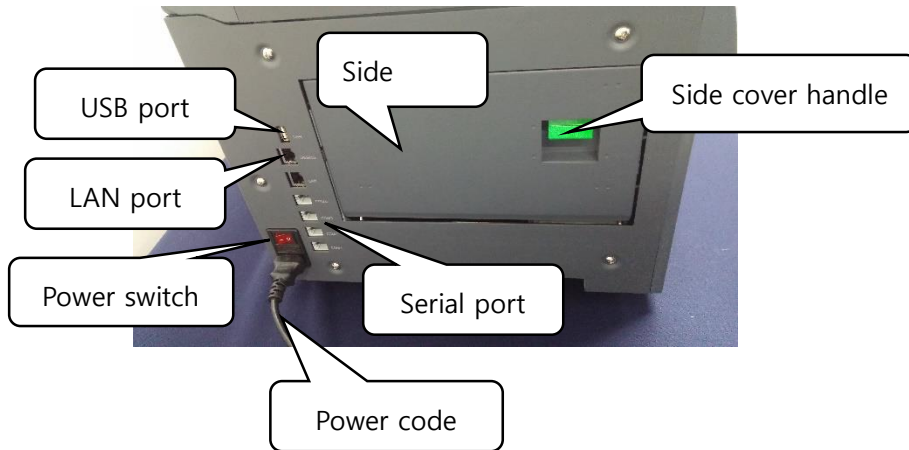


- USB port: A USB device connection port. It is used for various log and data backup and program upgrade.
- LAN port: Is a port to connect a LAN cable for communication connection.
- Serial port: Is a connection port to connect Serial RS-232. Used for output and debugging.
- Power switch: Used to turn the device on or off.
- Power code: Used to supply the power (AC 100~240V) of the device.
- Side cover: If paper jam occurs on the left side of the main module, open to check the feeding path.
- Side cover handle: Used to open the side cover.

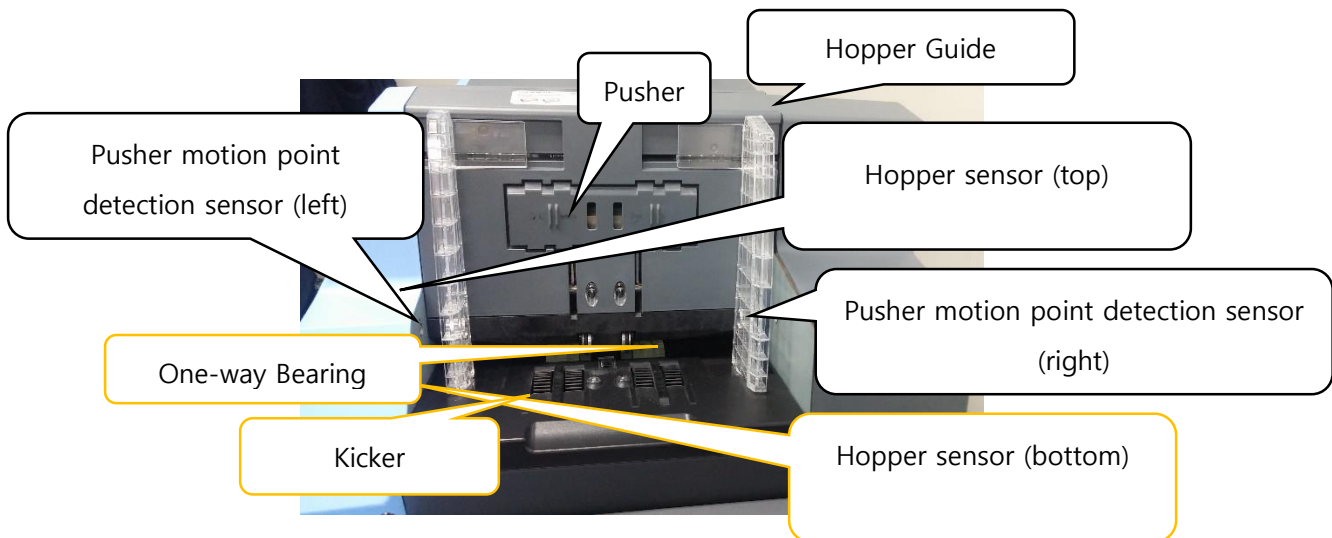**• Hopper unit (right)**


- Hopper Guide: You can adjust the left/right width to match the width of the banknotes placed on the hopper.
- Hopper sensor (top/ bottom): Detects whether there is a banknote in the hopper.
- Pusher: An auxiliary device that facilitates banknote input. It works when banknotes stacked in the hopper go down below a certain height and pushes the banknotes from top to bottom.
- Pusher motion point detection sensor (left/right): Detects when the height of the banknotes stacked in the hopper falls below a certain height.
- One-way Bearing: Separates banknotes one by one and inserts them.
- Kicker: Inserts banknotes one by one into the device.

► **Expansion module**

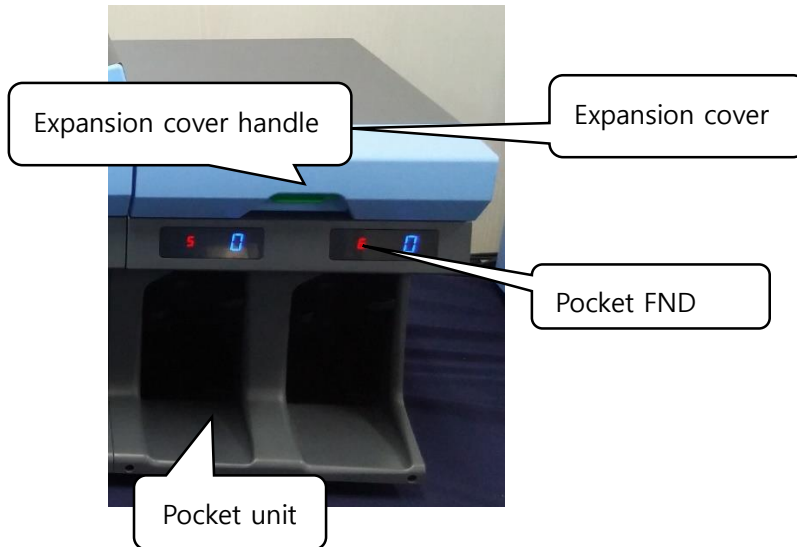

- Expansion Cover: In the event of paper jam in the expansion module, open to check the feeding path.
- Expansion Cover Handle: Used to open the expansion cover.
- Pocket Unit: Loads counted banknotes neatly by type.
- Pocket FND: Displays pocket number and count information.

► **Strapper module**

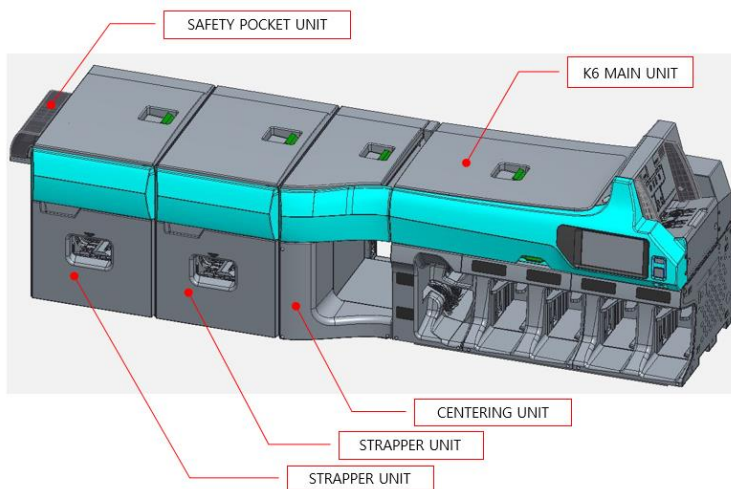


### 2.3. Basic screen composition and functions

#### ► Initial screen

This is the first screen that appears on the screen when the device is turned on.

The screen configuration may differ depending on the program version or system setting status.

※ For how to set the screen (count mode) that appears first when the device is turned on, refer to the [User Config](#) item in Chapter 5 (Management and Setting Function).

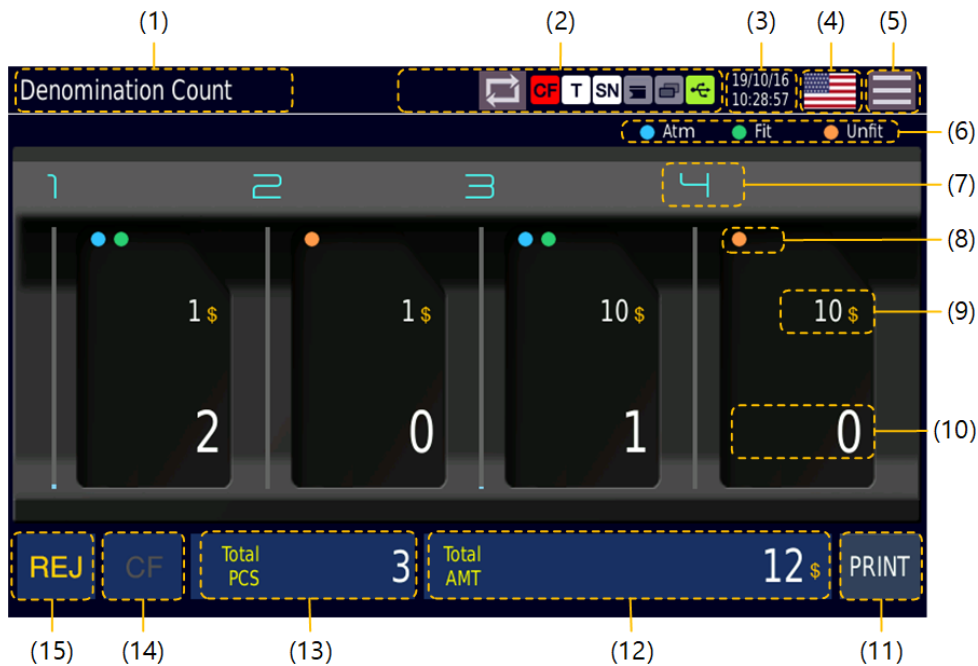



No.	Name	Function
(1)	Current mode	Displays the current deposit mode.
(2)	Device status	Displays the current status of the device.
		Press this icon to switch to Denomination Count/Normal Deposit mode.
		Displays counterfeit detection function On/Off status.
		Displays the tape detection function On/Off status.
		Displays serial number detection function On/Off status.
		Displays the cover status (open/closed).
		Displays online/offline (LAN connection) status.
(3)	Time display	Displays the current time. Year/Month/Day Hour: Min. : Sec.

(4)	[Currency setting]	Click this icon to change the currency setting.
(5)		Press this icon to enter the menu.
(6)	Status setting icon	Legend of the status setting icon.
(7)	Pocket number	Displays the number of each pocket.
(8)	Fitness setting display	Displays the fitness setting status for each pocket.
(9)	Denomination setting display	Displays the denomination setting status for each pocket.
(10)	Count quantity display	Displays the number of banknotes counted for each pocket.
(11)	[PRINT]	Click this icon to print out the current count information.
(12)	[Total AMT]	Displays the total counted amount. Click this icon to check detailed count information. Initialized by taking out banknotes from the hopper and all pockets.
(13)	Total PCS	Displays the quantity of counted banknotes. Initialized by taking out banknotes from the hopper and all pockets.
(14)	[CF]	Displays the status of counterfeit occurrence (activated when it occurs). Click this icon to check counterfeit information.
(15)	[REJ]	Displays the reject status (activated when it occurs). Click this icon to see the reason for reject.

► **Menu screen**

On the initial screen, click the menu entry icon () on the top right to switch to the menu screen.

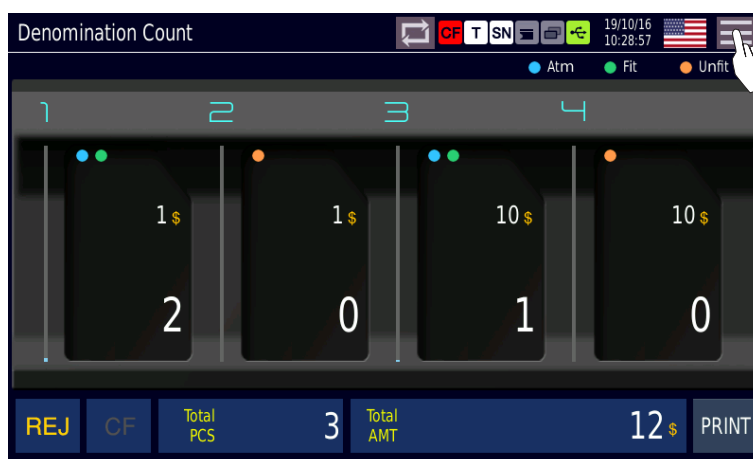

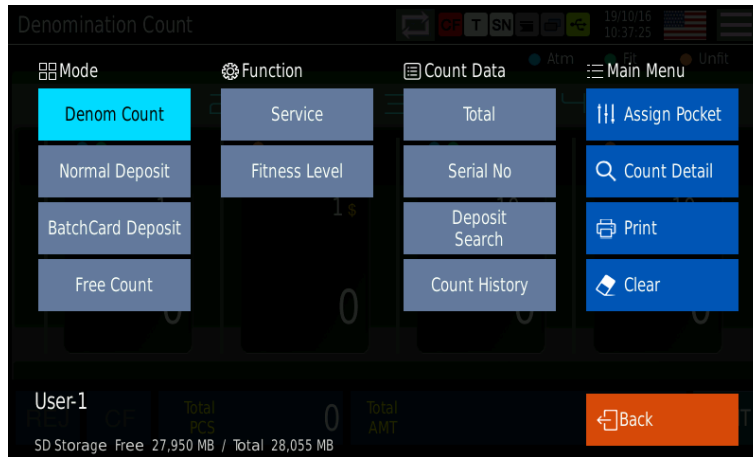

- **Mode:** You can select one of four count modes.
  - ① Denomination Count: Switches to count mode for each denomination.
  - ② Normal Deposit: Switches to normal deposit mode.
  - ③ Batch Card Deposit: Switches to batch card deposit mode.
  - ④ Free Count: Free Count: Switches to free count mode.
  
- **Function:** You can select two additional functions.
  - ① Service: Enters the maintenance menu (password input required).
  - ② Fitness Level: Adjusts the fitness level of the Soil and tape.
  
- **Count Data:** You can check 4 types of count data.
  - ① Total: Check the total count.
  - ② Serial No.: Switches to the Serial No. search screen.
  - ③ Deposit Search: Checks deposit processing details.
  - ④ Count History: Checks the count history and details.
  
- **Main Menu:** You can select one of four menus.
  - ① Assign Pocket: Switches to the Assign Pocket screen.
  - ② Count Detail: Switches to the count detail display screen.
  - ③ Print: Prints the current count details.
  - ④ Clear: Clears the current count details.



### 3. Counting Function

#### 3.1. Basic settings and operation


##### ► Language setting

K6 supports 7 languages.


You can change the language displayed on the screen in **[Service]** menu in the 'Function'.

※ You can select one of 7 languages (English, Korean, Russian, Turkish, Chinese, Spanish, French), and selectable languages may differ by model and software version.


- 1) Click the menu entry icon at the top right of the screen to switch to the menu screen.

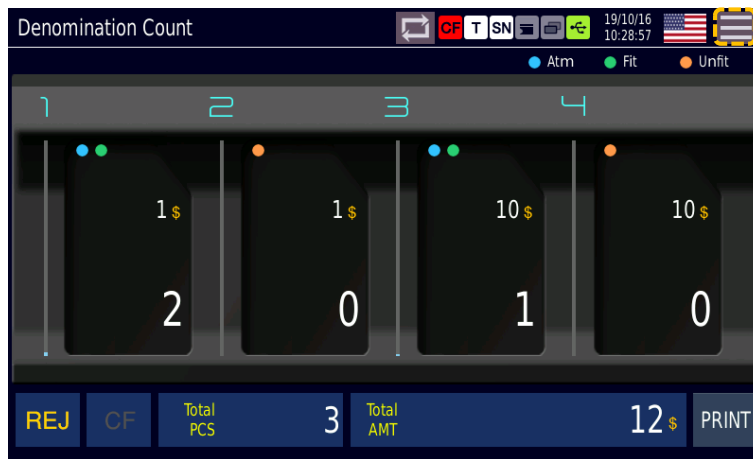


- 2) Press the **[Service]** button under "Function" to enter the service menu.

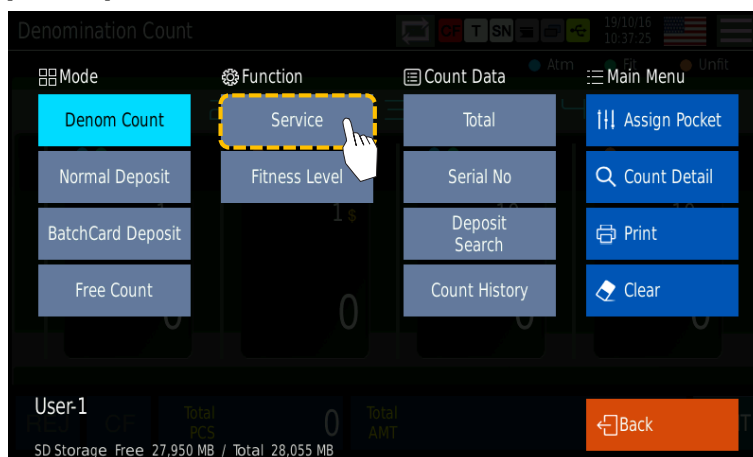

- 3) You must enter a password to access the service menu.  
Enter the password (4-digit number) in the password input window, and click **[Ok]**.

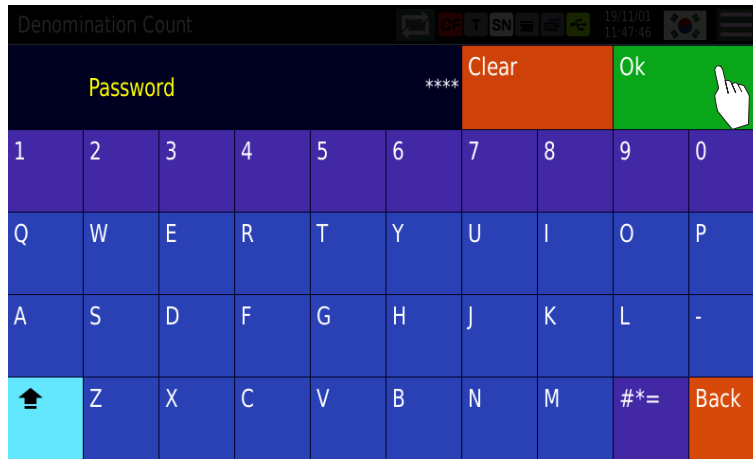


- 4) Click **[System]** among 6 tabs in the service menu, and then click **[Language]** in the System menu to select.

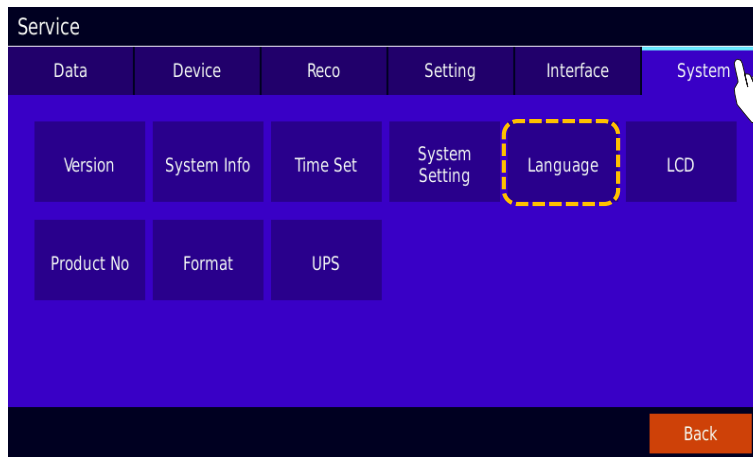

- 5) You can see a list of languages available on the device, and the currently used language is displayed in light blue.

Click the button of the language to change to select, and click **[Apply]** to apply it to the system.

※ The figure below is an example of selecting Korean.

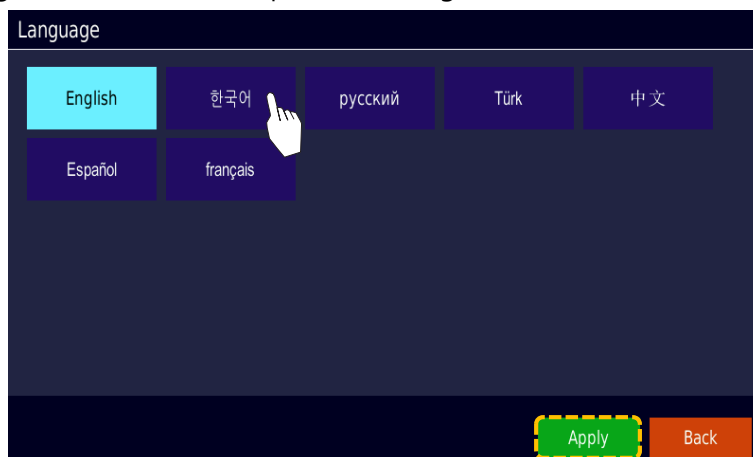


- 6) Menu and basic screen are displayed in the selected language.

► **Currency setting**

For accurate counting, currency needs to be set in the denomination counting, normal deposit, and batch card deposit modes.

※ In free count mode, currency setting is not required.


- 1) On the initial screen, click **the flag icon** in the upper right to enter the currency setting screen.

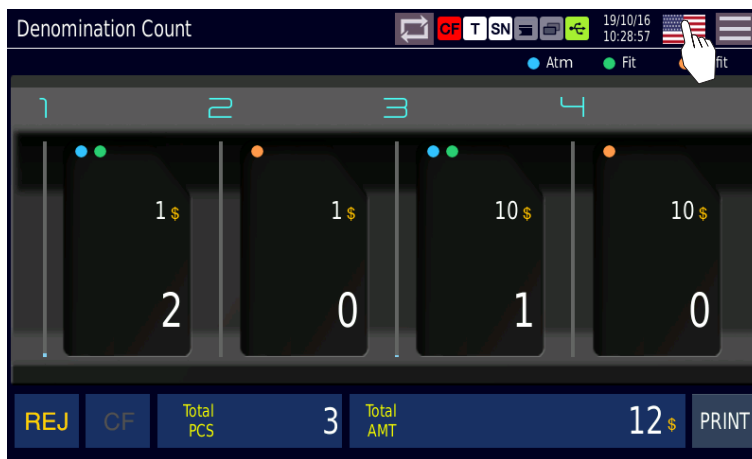

- 2) On the currency setting screen, a number of currencies mounted on the product are displayed in the form of a flag.

The figure below is an example of selecting the US (USD) currency.

※ A selectable currency may be displayed differently depending on the product.

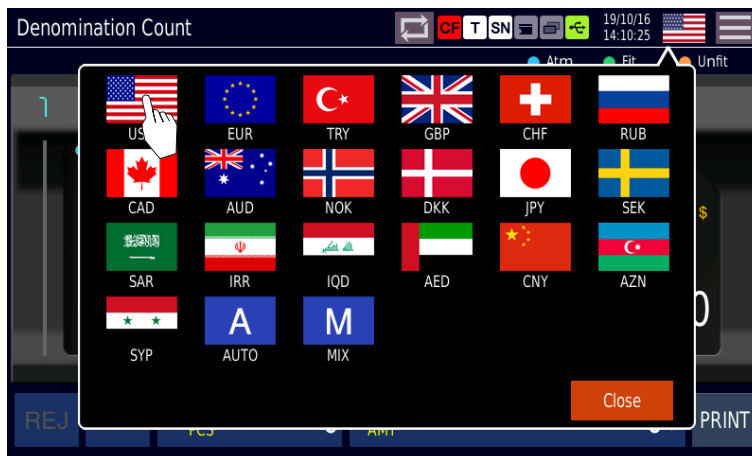

- **[A(Auto)]**: When handling banknotes including several currencies, recognize the banknotes that are inserted, count only the first currency and reject the other currencies.
- **[M(Mix)]**: When handling banknotes including several currencies, sort and stack currencies designated in each pocket. At this time, only one currency (same currency) can be loaded in one pocket.

E.g) If pocket 1 is set to USD → All from USD \$1 to \$100 are loaded to pocket 1.

※ Pockets can be set by currency or by denomination.

- 3) If you select the currency you want to count, the currency setup screen closes, and the icon in the upper right corner changes to the flag of the country.
- 4) If you want to cancel the currency setup, press the **[Close]** button as it is without selecting the currency.


### ► Count mode setting

This device provides a total of 4 count modes (denomination count, normal deposit, batch card deposit, free count).


A count mode can be switched in the following two ways:

- **Switching through menu**


- 1) On the initial screen, click the icon (☰) at the top right to enter the menu.

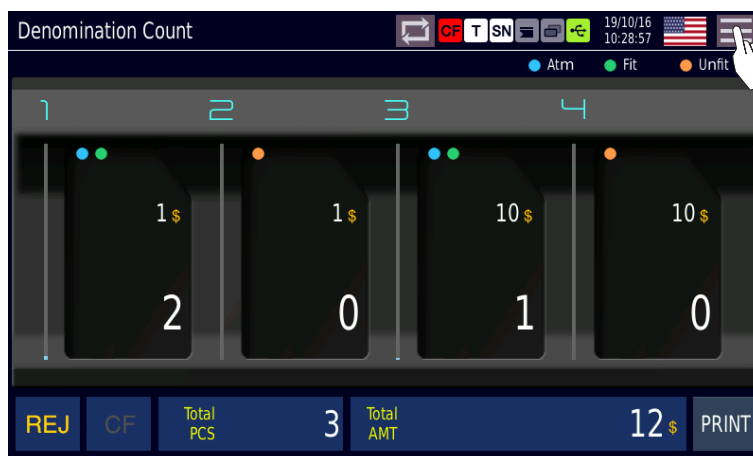


- 2) Select the count mode you want among **[Mode]** at the far left of the menu screen

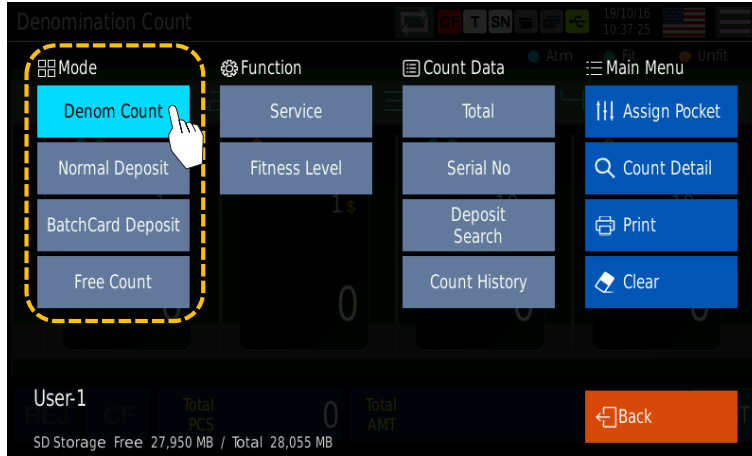

- **Switch through deposit mode switch icon (denomination count/ normal deposit)**

Click the deposit mode switch icon (  ) at the top of the initial screen to switch the mode.

Only **Denomination Count** and **Normal Deposit** are available for switch through the deposit mode switch icon.

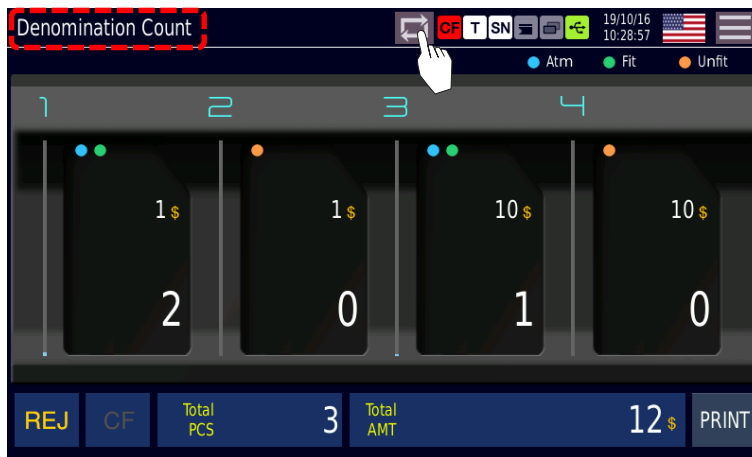

→ When count mode switching is complete, the current mode is displayed in the upper left corner of the screen.

## 3.2. Denomination Count

### ► Screen configuration


The basic screen of the denomination count mode is the same as the initial screen.

→ For the initial screen configuration, refer to the [initial screen](#) item.


※ The screen configuration may differ depending on the program version or system setting status.

### ► Operation method


- 1) Check if the mode at the top left of the screen is set to "Denomination Count".

If it is a different mode, use the menu entry icon () or the deposit mode switch icon () to switch to the denomination count mode.

※ For count mode setting method, refer to the [count mode setting](#) section.

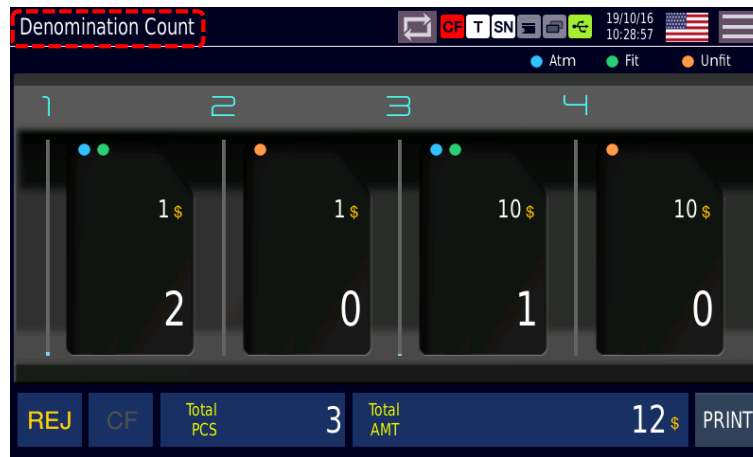

- 2) Check the currency setting, denomination for each pocket, and fitness setting. Change the settings if necessary. Check the country zone setting, the ticket type for each pocket, and the company setting. Change the settings if necessary.
  - ※ For how to set the country, refer to the [currency setting](#) section.
  - ※ For how to set the pocket, refer to the [Assign Pocket](#) section.
- 3) Counting starts when you put banknotes in the hopper on the counting standby screen. When the counting is finished, a screen showing the count result appears.

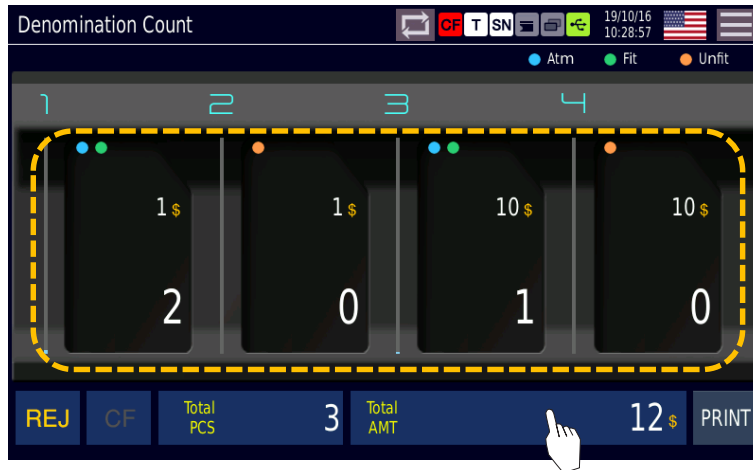


- 4) If you press **[Total AMT]**, you can check the detailed result about counting.
  - Switched to the Count Detail screen.
  - ※ For details on the count detail screen, please refer to the [count detail](#) section.
  
- 5) You can check the Assign Pocket by clicking on the part indicated by the yellow dotted line in the figure.
  - The screen switches to the Assign Pocket screen.
  - ※ For detailed information on the Assign Pocket, refer to the [Assign Pocket](#) section.
  
- 6) If there are banknotes left in the pocket, a message asking you to take out the banknotes appears on the screen.
 

In this case, take the banknotes out of the pocket and try again.
  
- 7) If you want to print the current count information, press **[PRINT]** at the bottom right of the screen.
  
- 8) If reject occurs, you can check the reason for reject by clicking **[REJ]** at the bottom left of the screen.
 

The [REJ] button is activated only when reject occurs.



### 3.3. Normal Deposit
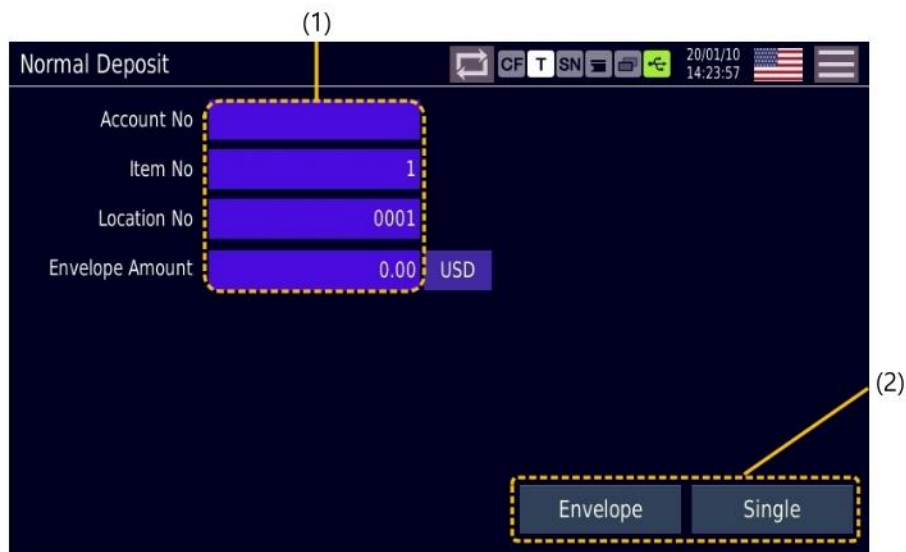
#### ► Screen configuration



No.	Name	Function
(1)	Input item	This is an item that allows users to enter numerical values.
	[Account No.]	Enter the depositor's account information. This account information is used for the search function.
	[Item No.]	Enter serial number or random number.
	[Location No.]	Users can enter it as they like.
	[Deposit Total]	Enter the amount to be deposited.
(2)	Deposit mode	Select the deposit mode.
	[Envelope]	Used to count more than one envelope deposit.
	[Single]	Used to count 1 deposit.

#### ► Operating method


- 1) Check if the mode at the top left of the screen is set to "Normal Deposit".  
If it is a different mode, use the menu entry icon () or the deposit mode switch icon () to switch to the normal deposit mode.  
※ For count mode setting method, refer to [count mode setting](#) section.





Field	Value
Account No	
Item No	1
Location No	0001
Envelope Amount	0.00 USD

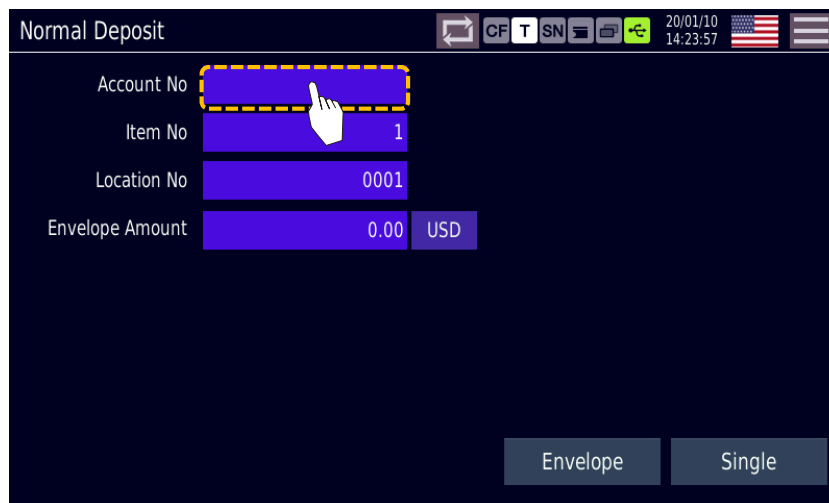

- 2) Check the currency setting, denomination for each pocket, and fitness setting.  
Change the settings if necessary.
  - ※ For how to set the country, refer to the [currency setting](#) section.
  - ※ For how to assign the pocket, refer to the [Assign Pocket](#) section.
  
- 3) If there is a value to be entered in the input items (account number, item number, Location No.), select and enter the required item.
  - ※ The figure below is an example of entering the account number.



Field	Value
Account No	
Item No	1
Location No	0001
Envelope Amount	0.00 USD

- 4) If you press each input item, the input screen appears.  
On the input screen, you can enter numbers, English (lower/upper cases), and special characters in each item.




- **[Clear]**: Clears all entered information.
- **[Ok]**: Confirms and approves the entered information.
- : Switches English upper/ lower cases.
- : Enter special characters.
- **[Back]**: Return to the previous screen.

5) **[Envelope Amount]** Select an item and enter an amount value.

When you press an item, the input screen appears.

- ※ [Envelope Deposit Total] is the total value of the single Deposit Total for single deposit, and the total amount of the envelope Deposit Total for envelope deposit.

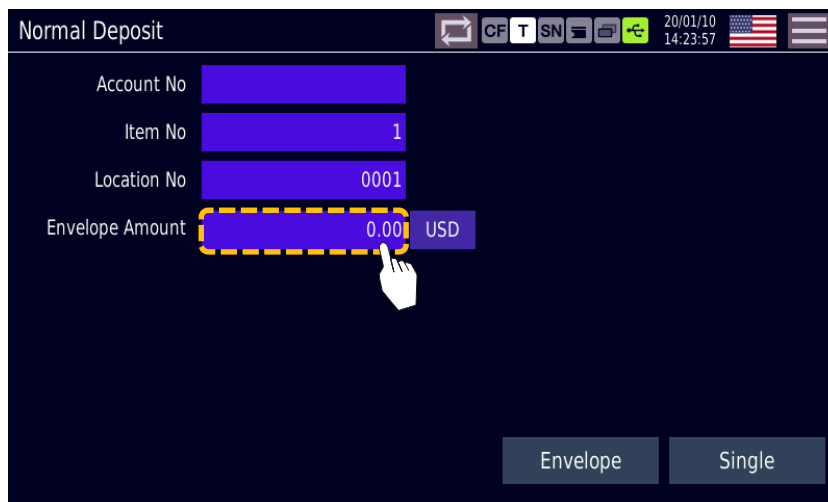

→ On the envelope Deposit Total input screen, you can enter only numbers and '.'.




- : Clear the entered information one by one.
- **Ok**: Confirms and approves the entered information.
- **Back**: Return to the previous screen.

6) If you have entered all items, press the **[Envelope]** or **[Single]** button to enter the count mode.

There are two types of deposit mode: envelope deposit and single deposit.

→ For more information on envelope deposit, refer to the [envelope deposit](#) section.

→ For more information on single deposit, refer to the [single deposit](#) section.

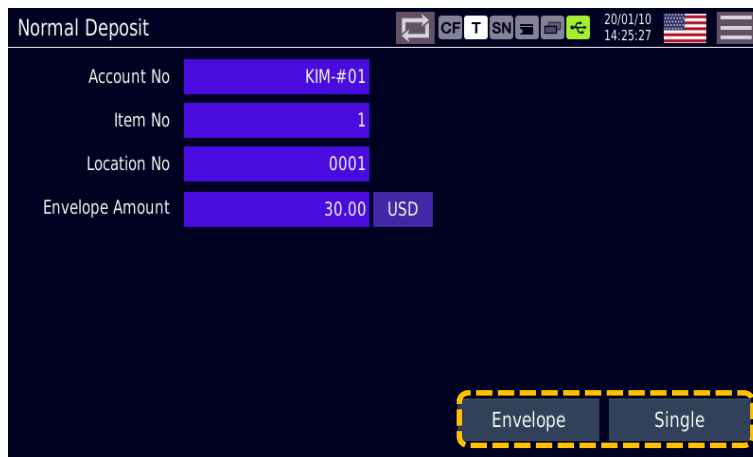


7) On the count standby screen, put banknotes on the hopper to start counting.

※ The figure below shows the envelope deposit count standby screen.



8) When counting is completed, counting result is displayed.

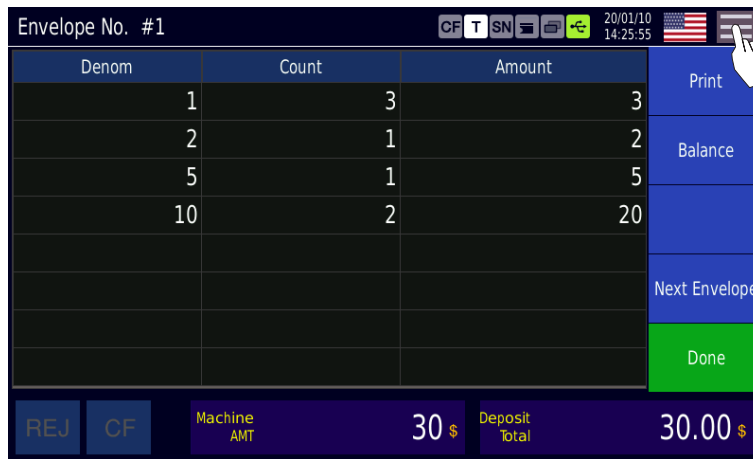

- **[Print]**: Prints count information.
- **[Balance]**: If there is a difference between the Amount Claimed and the actual counted amount, calibration (settlement) can be performed.
- **[Next Envelope]**: Performs the count of the next envelope.
- **[Done]**: Completes the deposit processing.

9) You can select the following functions by pressing the menu icon on the count standby or count completion screen.




- **[Cancel Deposit]**: Cancels all current counting status and returns to the deposit item entry screen.
- **[Count Detail]**: Checks detailed information on banknotes counted up to now
- **[Back]**: Return to the previous screen.

10) After counting and settlement, press **[Done]** to complete the deposit.

→ When you press the [Done] or [Deposit Complete] button to complete the deposit, if there are banknotes left in the reject pocket, the message screen shown below will appear.


In this case, take out all the remaining banknotes in the reject pocket and press the **[Ok]** button to complete the deposit.

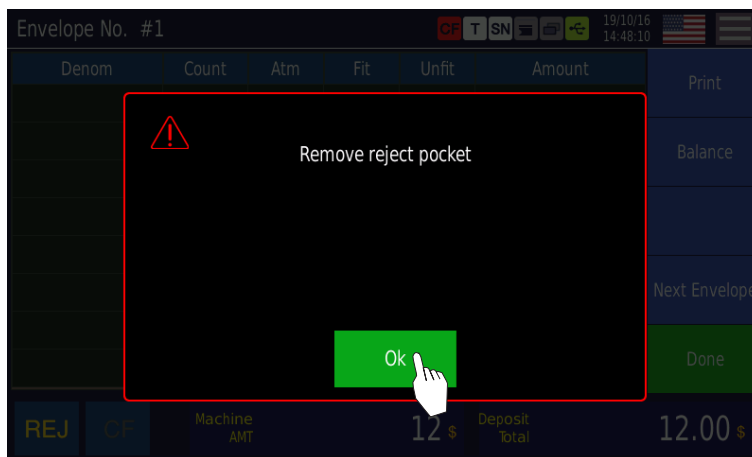


► **Envelope Deposit**

Select this deposit mode if you are processing the deposit for multiple envelopes.


- 1) After entering the input items on the normal deposit screen, press **[Envelope]** to switch to the envelope deposit count standby screen.

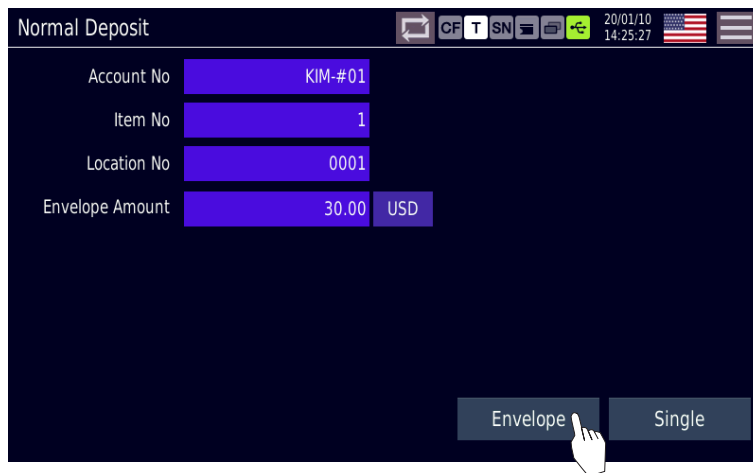

- 2) If you put banknotes in the hopper with the count standby screen appearing, counting of Envelope No. #1 will start.

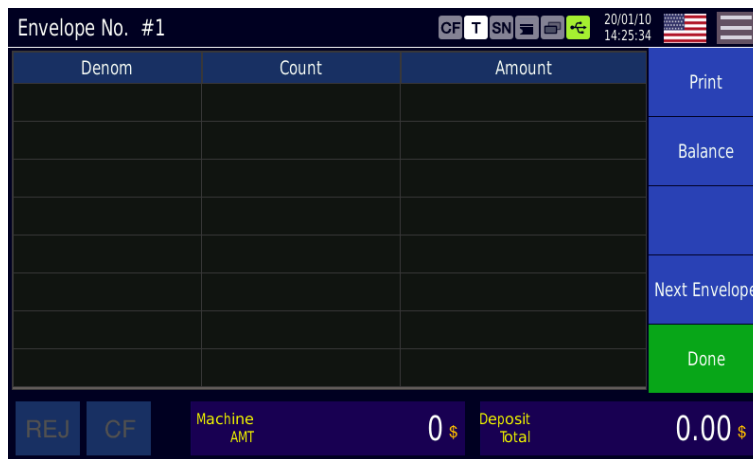

- 3) When counting is complete, the counting result is displayed as shown below.
  - ※ In single deposit mode, there is no additional input because it is used to count 1 deposit. For the single deposit mode, refer to the [Single deposit](#) section.

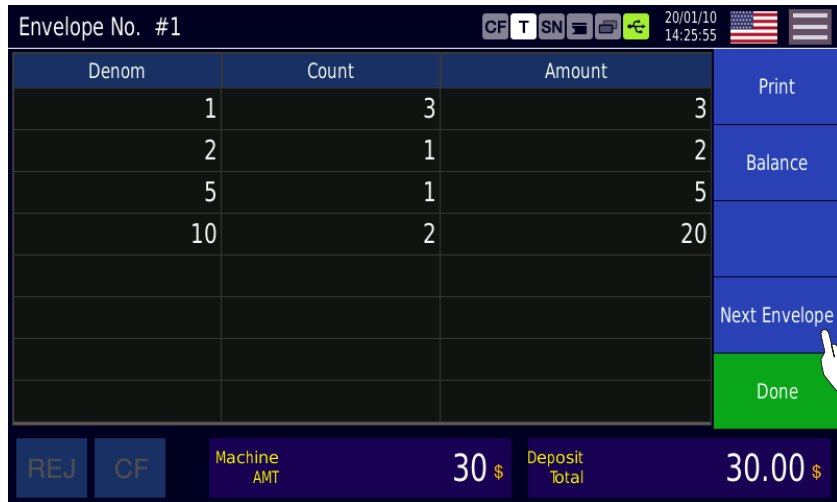

- **[Print]:** Press to print current count information.
- **[Balance]:** Press if there is a difference between the Amount Claimed and the actual counted amount, and settlement is required. For more information on the Balance function, refer to the [Balance](#) section.
- **[Next Envelope]:** Press this button to continue counting the next envelope. The screen switches to the Envelope No. #2 count standby screen as shown below.
- **[Done]:** Press to complete the deposit as it is. Deposit is completed.



- 4) If you put banknotes in the hopper with the count standby screen appearing, counting of Envelope No. #2 will start. When counting is complete, the counting result appears on the screen.

Envelope No. #2			
Denom	Count	Amount	
1	3	3	Print
2	1	2	Balance
5	1	5	
10	2	20	
			Next Envelope
			Done

REJ CF Machine AMT 30 \$ Deposit Total 30.00 \$

→ As in 3), you can press the **[Done]** button to complete the deposit, press the **[Balance]** button to proceed with settlement, or press the **[Next Envelope]** button to continue counting the next envelope.

The figure below shows the deposit processing result for 4 envelopes (Envelope No. #1-4).

Envelope No. #4			
Denom	Count	Amount	
1	2	2	Print
2	1	2	Balance
5	1	5	
			Next Envelope
			Done

REJ CF Machine AMT 9 \$ Deposit Total 9.00 \$

5) If you press the **[Done]** button, the counting results of the envelopes processed so far are displayed on the screen.



Total Envelope Count : 4						20/01/10 14:32:27
Denom	Machine Count	Machine Amount	Manual Count	Manual Amount		
1	11	11	0	0		Print
2	4	8	0	0		
5	4	20	1	5		
10	5	50	0	0		
20	0	0	0	0		
50	0	0	0	0		Next Envelope
100	0	0	0	0		
Total	24	89	1	5		Deposit Complete

REJ CF Machine AMT **89 \$** Deposit Total **94.00 \$**

- Click **[Deposit Complete]** to complete the deposit.
- After deposit is complete, you will be returned to the initial envelope deposit screen.

You can see that the number of Item No. has changed to "2".

※ The number of Item No. automatically increases by 1 each time a new deposit is initiated.

You can change this setting in the 'Deposit Option' item of the service menu.

For setting changes, refer to the [Deposit Option Setting](#) section.


Normal Deposit		20/01/10 14:33:35
Account No	<input type="text"/>	
Item No	<input type="text" value="2"/>	
Location No	<input type="text" value="0001"/>	
Envelope Amount	<input type="text" value="0.00"/> <span>USD</span>	

Envelope Single

► **Balance**


It is a function to change the Amount Claimed or manually enter the counted amount to settle if there is a difference between the Amount Claimed and the actual counted amount (if Balance is not 0).

Execute the Balance function by pressing the **[Balance]** button when the envelope count is complete.

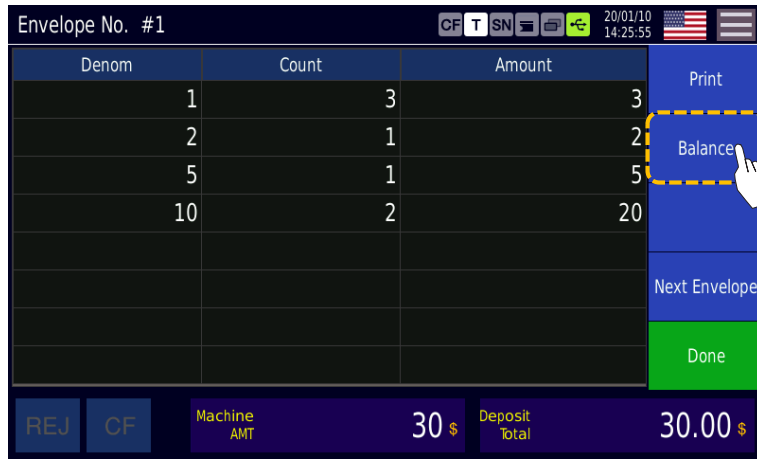

• **Screen configuration**

The screen of Balance #1 below is an example of the actual counted amount of \$30 and the Amount Claimed of \$35, and is when the balance becomes -5 and settlement is required.

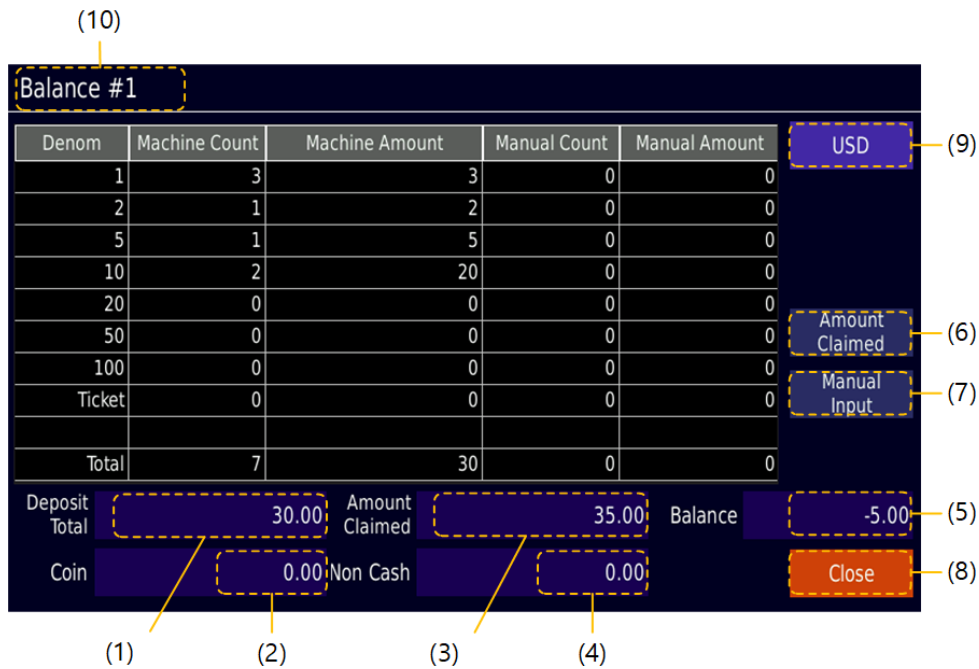

No.	Name	Function
(1)	Deposit Total	Sums and displays the amount counted by the device and the amount entered manually
(2)	Coin	Displays the manually entered coin amount
(3)	Amount Claimed	Displays the Amount Claimed
(4)	Non Cash	Displays the manually entered Non Cash amount
(5)	Balance	The amount that subtracted the Amount Claimed

		from the Deposit Total
(6)	[Amount Claimed]	Press to enter or change the Amount Claimed
(7)	[Manual Input]	Press to manually enter the balance count and process the settlement
(8)	[Close]	Press to close the current screen and return to the previous screen
(9)	Currency indication	Displays the currently set currency
(10)	Display the currently used function	Displays the functions currently in use

• **Enter Amount Claimed**

Balance is the amount of deposit total minus Amount Claimed, so it can be settled by entering and changing the Amount Claimed.

- 1) Since Deposit Total \$30 and Amount Claimed \$0, below is a status calculated with balance \$30. Click the **[Amount Claimed]** button to bring up the Amount Claimed input window.

Denom	Machine Count	Machine Amount	Manual Count	Manual Amount	USD
1	3	3	0	0	
2	1	2	0	0	
5	1	5	0	0	
10	2	20	0	0	
20	0	0	0	0	
50	0	0	0	0	
100	0	0	0	0	
Ticket	0	0	0	0	
Total	7	30	0	0	

Deposit Total	30.00	Amount Claimed	0.00	Balance	30.00
Coin	0.00	Non Cash	0.00	Close	


- 2) Enter the value of Amount Claimed and click **[Ok]**.
  - ※ You can enter only numbers and '.' in the Amount Claimed input window.
  - ※ In the screen below, if you enter the Amount Claimed value as \$30, the balance becomes 0, so the settlement is complete, but for the explanation of the manual input function, we entered **\$35 to cause balance**.



→ Pressing the **[Back]** button returns the screen to the previous screen without changing the value.

- When the Amount Claimed input is completed, the screen where the corresponding value has been entered appears.

You can see that the balance value has changed.

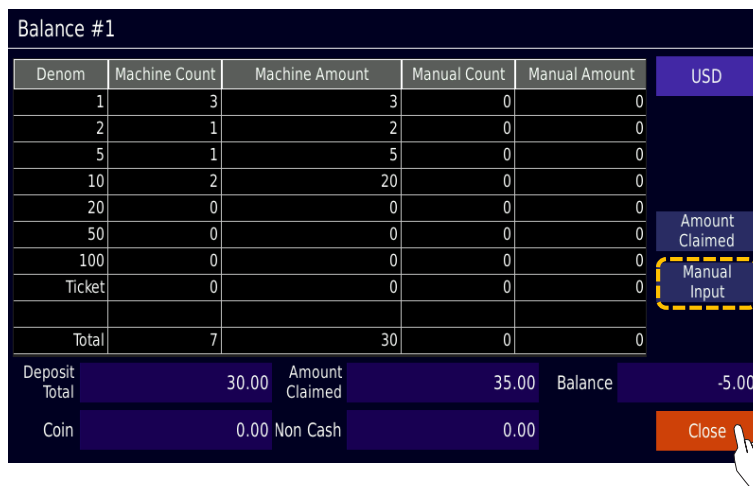

→ Click **[Close]** to end the settlement, or click **[Manual Input]** to proceed with additional settlement through manual input.

- Enter Manual Input items**

Manual input is a function that adjusts Deposit Total, not Amount Claimed to proceed with settlement.

You can adjust Deposit Total by entering cash, non-cash, and coin amount items.

- Since Deposit Total \$30 and Amount Claimed \$0, below is a status calculated with balance \$30.

Press the **[Manual Input]** button to switch to the manual input screen.

Balance #1

Denom	Machine Count	Machine Amount	Manual Count	Manual Amount	USD
1	3	3	0	0	
2	1	2	0	0	
5	1	5	0	0	
10	2	20	0	0	
20	0	0	0	0	
50	0	0	0	0	
100	0	0	0	0	
Ticket	0	0	0	0	
Total	7	30	0	0	

Deposit Total	30.00	Amount Claimed	35.00	Balance	-5.00
Coin	0.00	Non Cash	0.00		

Buttons: Amount Claimed, Manual Input, Close

2) Select the item required for settlement among [Cash], [Non Cash] and [Coin].

Manual Input

Denom	Count	Manual Total
1	0	0.00
2	0	
5	0	
10	0	
20	0	
50	0	
100	0	

Buttons: Cash, Non Cash, Manual Total, Coin, 1-9, 0, ., Delete, Clear, Ok, Close

→ If you select [Cash], select [Denom, \$1-100] suitable for settlement and enter [Count].  
 The amount obtained by multiplying Denom and count together is automatically entered in the "Manual Total" field.

※ You can enter only numbers and '.' in the manual input window.

Manual Input

Denom	Count	Manual Total
1	0	5.00
2	0	
5	1	
10	0	
20	0	
50	0	
100	0	

Buttons: Cash, Non Cash, Manual Total, Coin, 1-9, 0, ., Delete, Clear, Ok, Close


- [Delete]: Deletes the entered numbers one by one.

- **[Clear]**: Clears all entered numbers.
  - **[Ok]**: Checks the entered number, applies it, and returns to the input screen.
  - **[Close]**: Closes the manual input window and returns to the previous screen.
- When **[Non Cash]** is selected.
- When **[Coins]** is selected.



3) When you have entered all values required for settlement, click the **[Close]** button.

It will be switched the screen to reflect the settlement result.

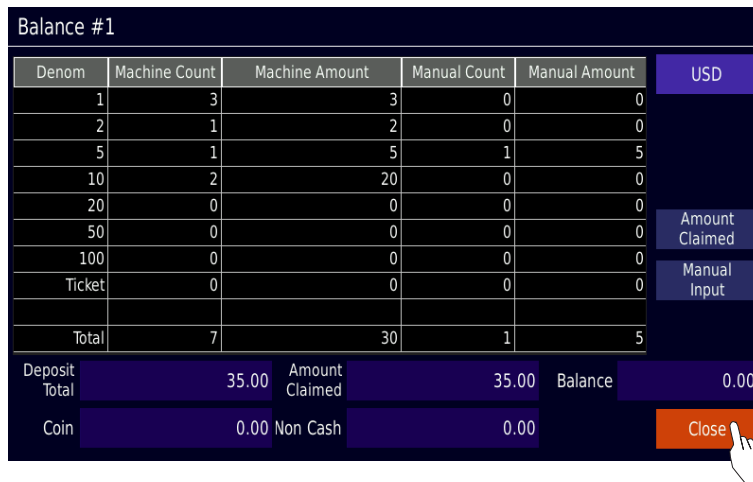

4) When all settlements are complete, click **[Done]** to complete the deposit.

Envelope No. #1				20/01/10 14:28:30
Denom	Count	Amount		
1	3	3		Print
2	1	2		Balance
5	1	5		
10	2	20		
				Next Envelope
				Done

REJ CF Machine AMT **30 \$** Deposit Total **35.00 \$**

► **Single Deposit**

Use this mode when processing the deposit only for one envelope.

- 1) After entering the input items on the normal deposit screen, press **[Single]** to switch to the single deposit count standby screen.

Normal Deposit				20/01/10 14:37:57
Account No	KIM-#04			
Item No	4			
Location No	0001			
Envelope Amount	31.00	USD		

Envelope Single

- 2) If you put banknotes in the hopper with the count standby screen appearing, counting will start.



3) When counting is completed, the counting result is displayed as shown below.



- **[Print]**: Press to print current count information.
- **[Balance]**: Press if there is a difference between the expected Deposit Total and the actual counted amount, and settlement is required.
- **[Done]**: Press to complete the deposit as it is. Deposit is completed.

4) Click **[Balance]** to compare the counted amount with Amount Claimed and check that the number in the "Balance" field is 0.



Balance					
Denom	Machine Count	Machine Amount	Manual Count	Manual Amount	USD
1	3	3	0	0	
2	1	2	0	0	
5	1	5	0	0	
10	2	20	0	0	
20	0	0	0	0	
50	0	0	0	0	
100	0	0	0	0	
Ticket	0	0	0	0	
Total	7	30	0	0	
Deposit Total		30.00	Amount Claimed	31.00	Balance -1.00
Coin		0.00	Non Cash	0.00	

→ If the balance item is not 0, perform the settlement using **[Amount Claimed]** or **[Manual Input]**.

※ For detailed explanation of the settlement process, refer to the [Balance](#) section.

5) After completing the settlement, click **[Close]** to switch to the screen reflecting the settlement result.

Single			
Denom	Count	Amount	
1	3	3	Print
2	1	2	Balance
5	1	5	
10	2	20	
			Deposit Complete

Machine AMT 30 \$ Deposit Total 31.00 \$

→ Click **[Deposit Complete]** to complete the deposit.

→ After deposit is complete, you will be returned to the initial envelope deposit screen.

You can see that the number of Item No. is changed by adding 1.

※ The number of Item No. automatically increases by 1 each time a new deposit is initiated.

You can change this setting in the 'Deposit Option' item of the service menu.

For setting changes, refer to the [Deposit Option Setting](#) section.

Normal Deposit

20/01/10 14:39:47

Account No	
Item No	5
Location No	0001
Envelope Amount	0.00 USD

Envelope Single

### 3.4. Batch Card Deposit

The batch card consists of two types, a start card and a stop card, and not only informs the start and end of each batch, but also enables the device to recognize and sort the information of each batch through a barcode.

This product supports deposit mode using batch cards.

#### ► Batch Card

There are two types of batch cards as shown below.




[Start batch card]

[Stop batch card]

- (1) **Start batch card:** The front is yellow, and there are thick vertical lines on the left and right sides of the back, respectively. The barcode reads "00000000".
  - (2) **Stop batch card:** The front is red, and there are thick horizontal lines on the left and right sides of the back, respectively. A serial number no "00000000" is written on the barcode.
- A bundle from start batch cards to banknotes and stop batch cards is called a 'batch'.
- (3) The start batch card must be inserted into the beginning of the batch and the stop batch card into the end.

When inserting a batch card, make sure the color of the card is always inserted in the same direction.

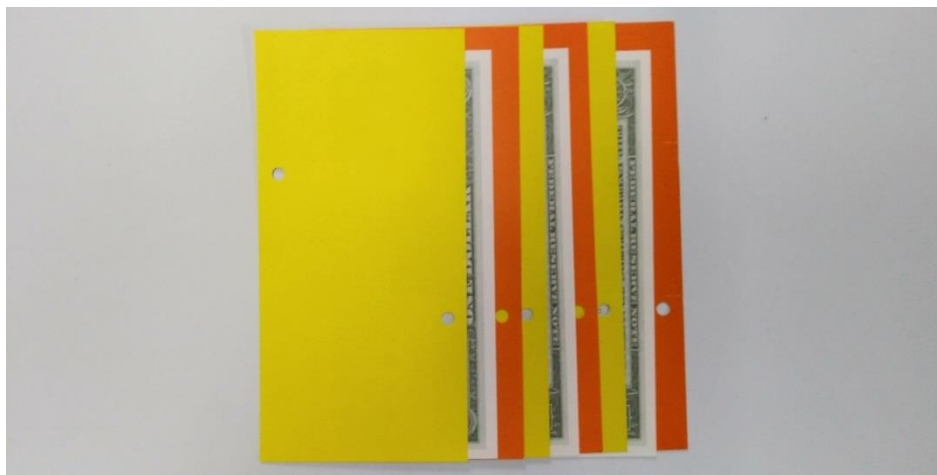

← Insert direction

(4) When placing the batch card in the hopper, make the colored side face down.



► Screen configuration



No.	Name	Function
(1)	Batch Card No.	Displays the recognized batch card number.
(2)	Amount	Displays the amount deposited (counted amount) by batch card
(3)	Input BatchCard No.	Press this button to manually enter the batch card number. ※ In case of batch card number error, it is activated by selecting the corresponding batch card number (Bad recognition batch card)
(4)	End Tray	Complete the batch card deposit operation

### ► Operating method

1) Check if the mode at the top left of the screen is set to “**BatchCard Deposit**”.

If it is a different mode, use the menu icon to switch to batch card deposit mode.

※ For count mode setting method, refer to [count mode setting](#) section.

※ You cannot enter the batch card deposit mode by using the deposit mode conversion icon.



2) Check the currency setting, denomination for each pocket, and fitness setting.  
Change the settings if necessary.

※ For how to set the country, refer to the [currency setting](#) section.

※ For how to assign the pocket, refer to the [Assign Pocket](#) section.

3) On the batch card deposit standby screen, place banknotes in the hopper to start counting.

※ For how to insert a batch card, refer to the [Batch Card](#) section.




→ The processed batch card is loaded into the reject pocket.

If there is a rejected banknote, enter it manually or re-insert it with the batch card loaded in the reject pocket.


- 4) When all the banknotes and batch cards to be processed are loaded, press the **[End Tray]** button to complete the processing.

The batch card counting result is displayed on the screen.

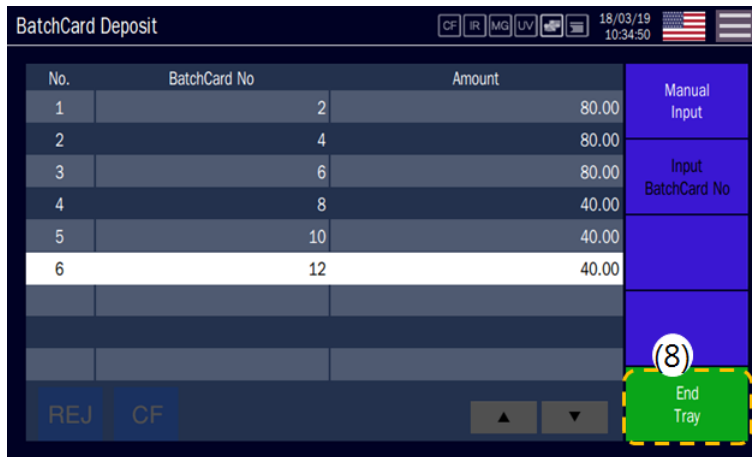

→ If the batch card number is not recognized, or if there is no recognized batch card even though **[End Tray]** is pressed, the batch card number of "9999999" is displayed as follows.

In this case, select the batch card number from the result screen and press the **[Input BatchCard No.]** button to enter the batch card number manually.

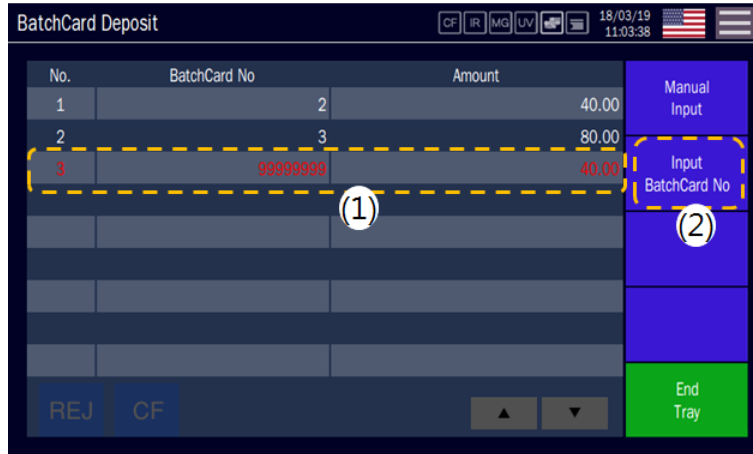


→ If the batch card is not recognized by the sensor or the Reco Unit because the batch card is inserted incorrectly, the following message is displayed on the screen and the device stops.



→ At this time, since the batch card (Last Batch No: xxxxxxxx) indicated in the message has been processed normally, all banknotes loaded after this batch card must be re-inserted into the device.


Combine the raw banknote in the reject pocket and the banknote in the hopper as shown in the figure below and insert them again.

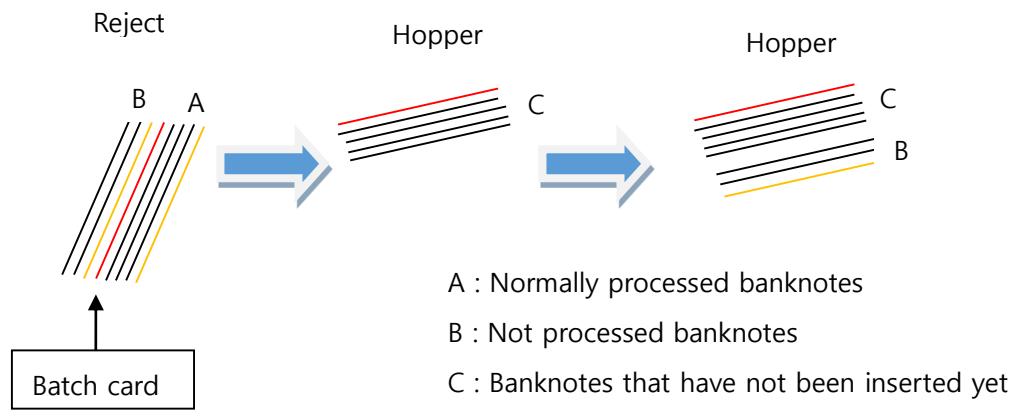

► **Batch card function setting**


The batch card has two functions (Secure/Separate), and the set function can be changed in **[User Option]** of the 'Service' menu.

- 1) Press the menu entry icon at the top right of the screen to switch to the menu screen.

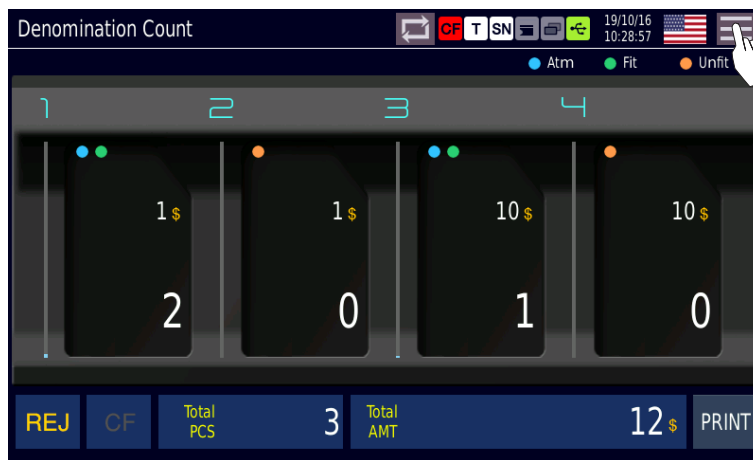


- 2) Press the [Service] button under 'Function' to enter the service menu.



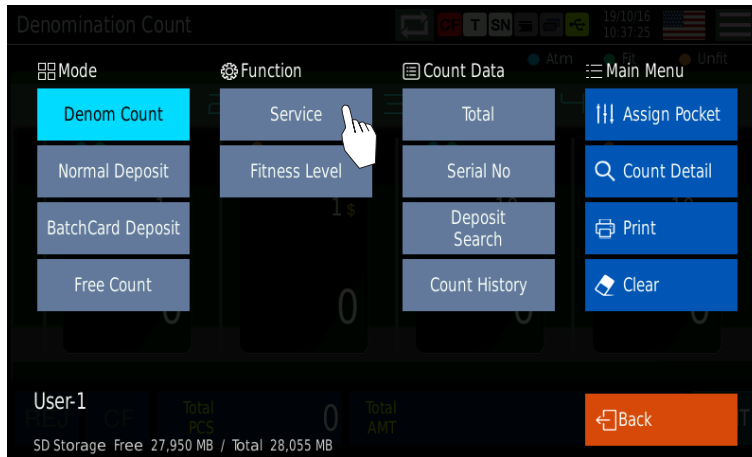


3) You must enter a password to access the service menu.


Enter the password (4-digit number) in the password input window, and click [Ok].

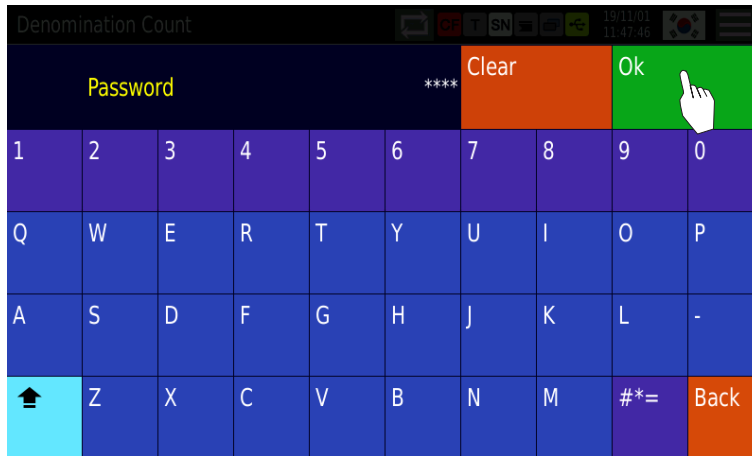

4) In the 'Service (Maintenance)' menu, click the [Setting] tab to select, and click [User Option] to switch to the user option setting window.

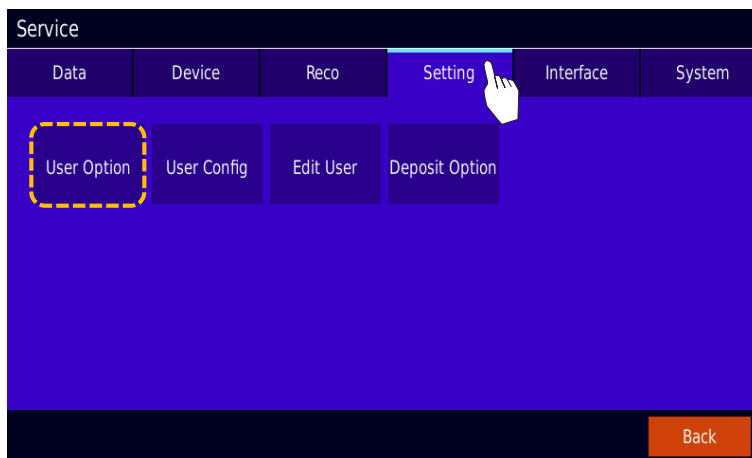

- 5) Click and select the desired item (Secure/Separate) in “**Batch Card Mode Type**” in the middle of the User Option screen.

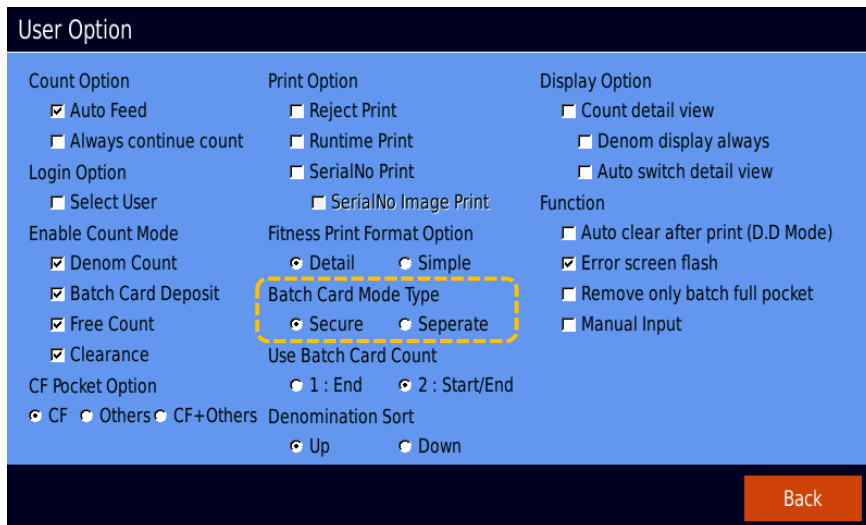

### (1) Secure mode

- This is a default mode. When setting the batch card mode to 'Secure', you can load multiple batch cards into the reject pocket.
- In this mode, if the hopper recognizes the stop batch card, the input motor stops, and the stop batch card must be loaded in the reject pocket to resume input.
- If more than 70% of the batch quantity is loaded in the reject pocket and the Stop batch card is recognized, the next batch is loaded into another reject pocket. At this time, if another reject pocket is full, input stops, and the user must remove the banknote from the reject pocket to resume input.

### (2) Separate mode

- This mode loads only one batch into one reject pocket.
- When the hopper recognizes the Stop batch card, the next batch is loaded into another reject pocket. At this time, if there are already loaded banknotes in another reject pocket, the user must remove the banknote from the reject pocket to resume input.

- ✓ In batch card deposit mode, reject pockets cannot be designated as regular pockets or counterfeit (CF) pockets.
- ✓ If the reject pocket is full while one batch has not been processed yet, input stops even if the other reject pocket is empty.

This is a measure to prevent users from confusing the batches, and the banknotes in the reject pocket must be removed to resume input.

- ✓ When the Stop batch card is recognized by the Reco unit, the batch information processed so far is output to the printer and the batch information is transmitted to the server.
  - ✗ External printer and LAN line must be connected to the machine.


### 3.5. Free Count

Free count is a mode in which notes such as banknotes, checks, and test banknotes are only counted without distinguishing denomination and fitness.

This mode does not support denomination classification, counterfeit detection, fitness functions, etc.

► **Screen configuration**

- **When there are 6 pockets**

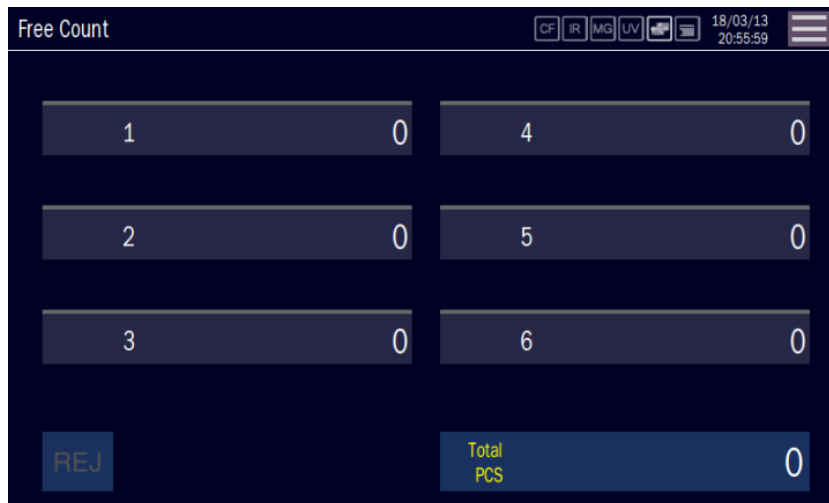

- **When there are 4 pockets**



## ► Operating method


- 1) Check if the mode at the top left of the screen is set to "**Free Count**".  
If it is a different mode, use the menu icon to switch to free count mode.  
  
※ For count mode setting method, refer to [count mode setting](#) section.  
※ You cannot enter the batch card deposit mode by using the deposit mode conversion icon.
  
- 2) On the count standby screen, put banknotes in the hopper to start counting.  
When counting is finished, the counting result is displayed on the screen.  
  
※ In the free count mode, denomination classification, counterfeit detection, and fitness are not supported, but you can set the batch for each pocket so that the corresponding number of sheets can be loaded into the pocket.  
※ For batch setting, refer to the [batch setting](#) section.

### 3.6. Additional settings and operations


In the function menu (Service, fitness level) and the Main Menu (Assign Pocket), you can change the various settings required for counting.

#### ► Deposit Option


- 1) Press the menu entry icon (☰) at the top right of the screen to display the menu window, and then press the **[Service]** button under 'Function' to enter the service menu.

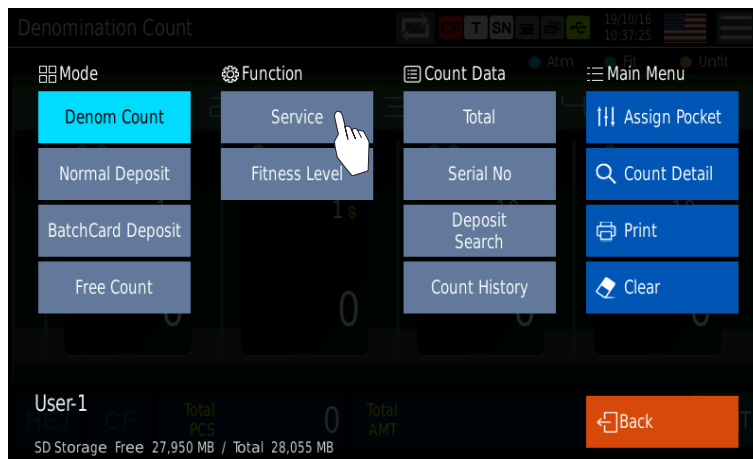

- 2) From the service menu, click the **[Setting]** tab to select, and then click **[Deposit Option]**.

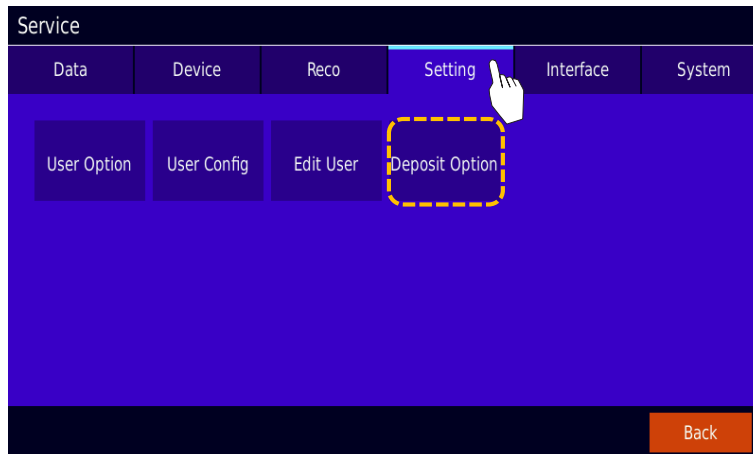


- 3) In the Deposit Option, you can select or cancel the deposit-related option.

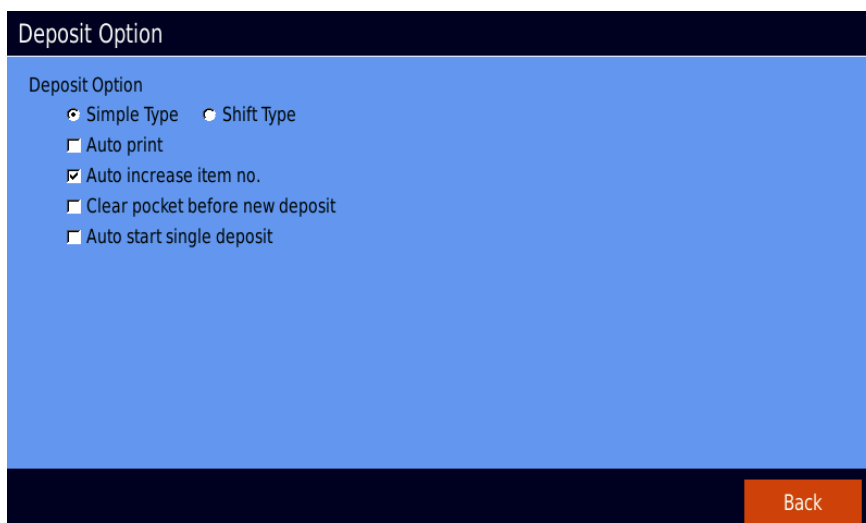

Line	Name	Function
1	Simple/Shift Type	<a href="#">Add detailed description for each option</a>
2	Auto print	When the deposit is completed, the result is printed automatically
3	Auto increase item no.	When the deposit is completed, the Item No. is automatically increased by 1.
4	Clear pocket before new deposit	<a href="#">Add detailed description for each option</a>
5	Auto start single deposit	<a href="#">Add detailed description for each option</a>


► **Fitness Level**

- 1) After opening the menu window, press the [Fitness Level] button under 'Function' to switch to the fitness level window.

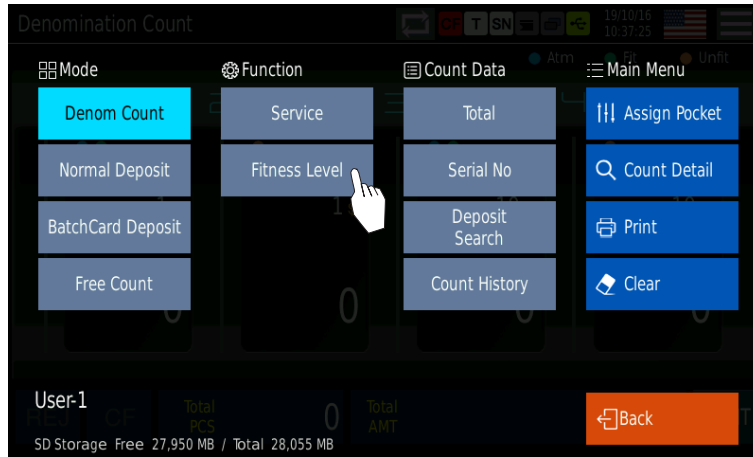

- 2) You can adjust Soil level and tape level in the fitness level window.

Among them, adjust the ATM level and the fitness level in the [Soil Lever] window.

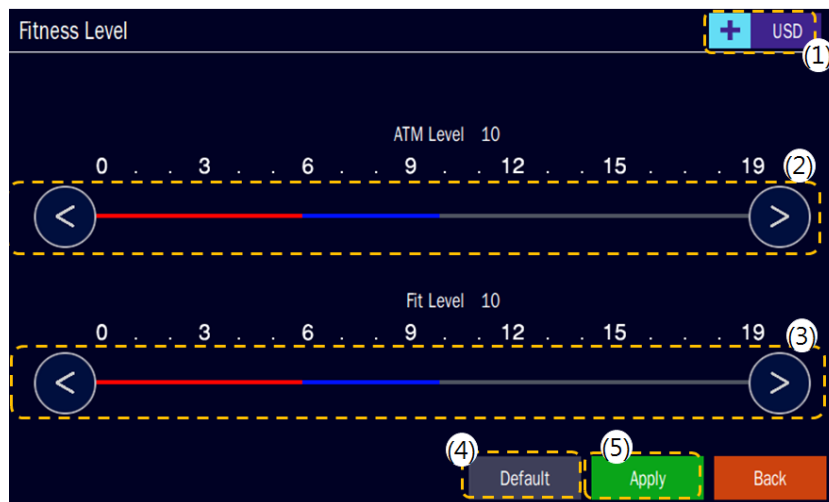

No.	Name	Function
(1)	[Currency setting]	Click this icon to select the currency you want to set up
(2)	[ATM level]	Press the <, > icons to adjust the ATM level. Increasing this value will cause more banknotes to be stacked in the ATM
(3)	[Fit level]	Press the <, > icons to adjust the fitness level. Increasing this value will reduce the amount of banknotes filtered
(4)	[Default]	Press this button to change the all figures to default



(5)	[Apply]	Press this button to apply the adjusted value
(6)	[Back]	Press this button to return to the previous screen


3) To adjust the tape level, press the [Tape Level] button to switch to the tape level window

Fitness mode recognizes banknote condition, and automatically separates those that are taped together, stained, broken, holed, bent or missing corner

### ► Assign Pocket


1) After opening the menu window, press the **[Assign Pocket]** button under 'Main Menu' to switch to the Assign Pocket window.

※ You can use the pocket setting menu only in denomination count and normal deposit mode, and can set only batch in free count mode. For the batch setting in free counting mode, refer to the [batch setting](#) section.

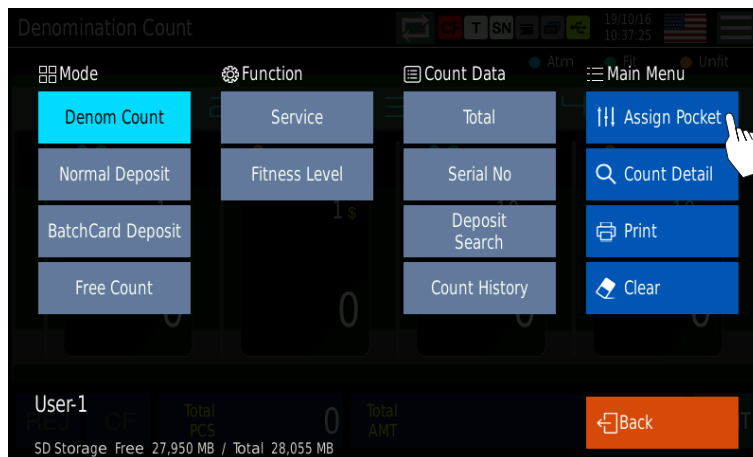

2) In the Assign Pocket window, you can check and change denomination for each pocket, generation (new/old), direction, fitness, and batch setting.

You can save settings as preset, or you can also change preset that have already been saved.

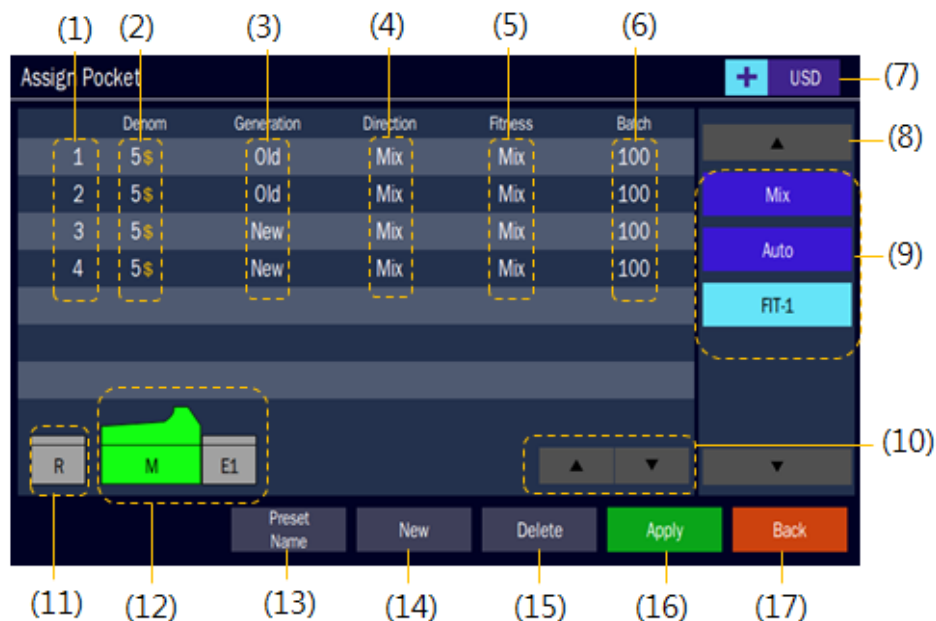

No.	Name	Function
(1)	Pocket No.	Displays the Pocket No. of the selected module.
(2)	[Denom]	Displays the denomination set in the pocket. You can change the denomination setting of the pocket by pressing each item
(3)	[Generation]	Displays the generation (new/old) set in the pocket. You can change the generation setting of the pocket by pressing each item
(4)	[Direction]	Displays the direction set for the pocket. You can change the direction setting of the pocket by pressing each item
(5)	[Fitness]	Displays the fitness level set in the pocket. You can change the fitness setting of the pocket by pressing each item
(6)	[Batch]	Displays the number of batches set in the pocket. You can change the batch setting of the pocket by pressing each item
(7)	[Currency indication]	Displays the currency to be set currently. Click this icon to change currency settings
(8)	[Preset scroll]	If the set preset does not fit on one screen, you can click this icon to move up (▲) down (▼).
(9)	[Preset list]	Displays the preset stored in the device. You can import the preset by pressing the preset name

(10)	[Pocket setting scroll]	If multiple denominations are set for each pocket and the pocket setting display does not fit on one screen, you can click this icon to move up (▲) down (▼).
(11)	[Reject pocket setting (R)]	Click this icon to change the settings of the reject pocket
(12)	[Module setting (M/E)]	Click this icon to change the pocket settings of the main (M)/expansion (E) modules
(13)	[Preset Name]	Press this button to change the name of the currently selected preset
(14)	[Create/New]	Press this button to create a new preset.
(15)	[Delete]	Press this button to delete the selected preset
(16)	[Apply]	Press this button to apply the pocket and preset settings
(17)	[Back]	Return to the previous screen.

• **Setting details for each pocket**

- 1) Select the pocket module (main/reject/expansion) you want to change.



- 2) Press to select the denomination of the pocket you want to change.
- 3) In the denomination selection window, click the desired denomination to select, and click **[Ok]** to apply.



- 4) Set the generation, direction, and fitness also in the same way as the denomination selection.



- 5) Click to select the batch of the pocket you want to change.



- 6) After entering the batch quantity (up to 500 sheets), click **[OK]** to apply.



7) When the pocket setting is complete, click **[Apply]** to confirm the setting.



- **Setting preset**

This device supports the pocket setting preset function so that the user can previously save and apply the pocket setting suitable for the situation in various usage environments.


- **Create/New**

- 1) When the setting of each pocket is completed, click the **[Create/New]** button to move to the screen to create a new preset.



2) Enter the name of the new preset.

※ You can use **English upper/lower cases, numbers and special characters** for preset names.

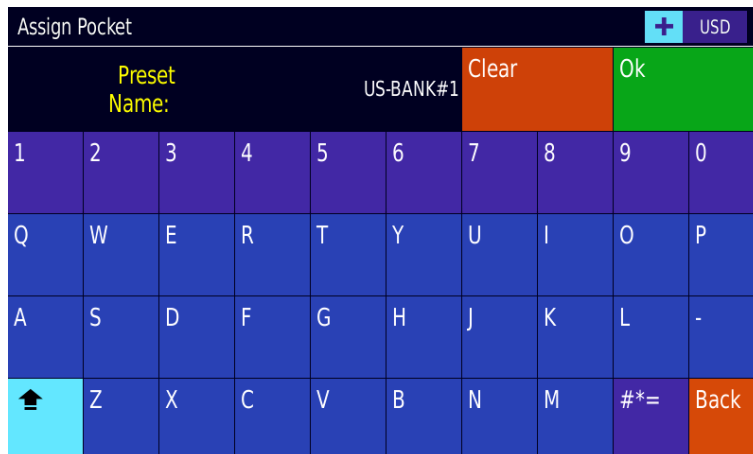

- **[Clear]**: Clears all entered information.
- **[Ok]**: Confirms and approves the entered information.
- **↑**: Switches the English upper/ lower cases.
- **#\*='**: Enter special characters.
- **[Back]**: Return to the previous screen.

3) Return to the initial pocket setting screen and click **[Apply]** to save the changes.


**- Change preset name**

1) To change the name of an existing preset, press the preset to select and **[Preset Name]** to move to the preset name change screen.

※ The following screen is an example of changing the preset name "MONY" to "EUR-#1".



2) Enter the name you want to change and click **[Ok]** to apply.

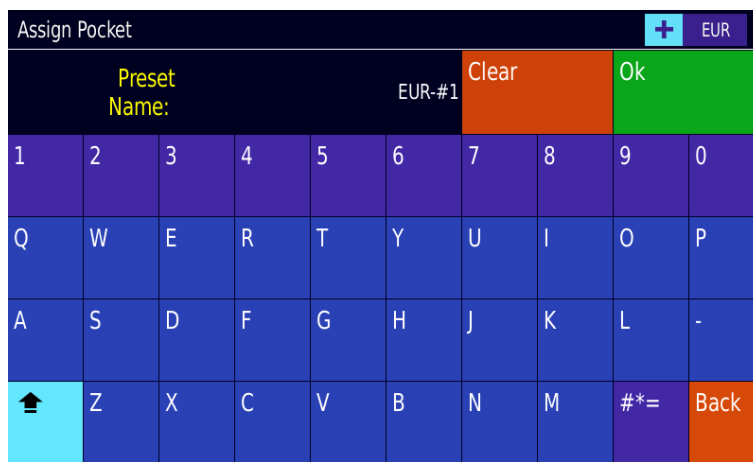


3) Return to the initial pocket setting screen and click **[Apply]** to save the changes.

**Delete preset**

1) Click and select the preset to be deleted, and press the **[Delete]** button.



- When the “Delete Preset?” confirmation window appears, click **[Yes]** or **[No]** to complete or cancel the deletion of the preset.

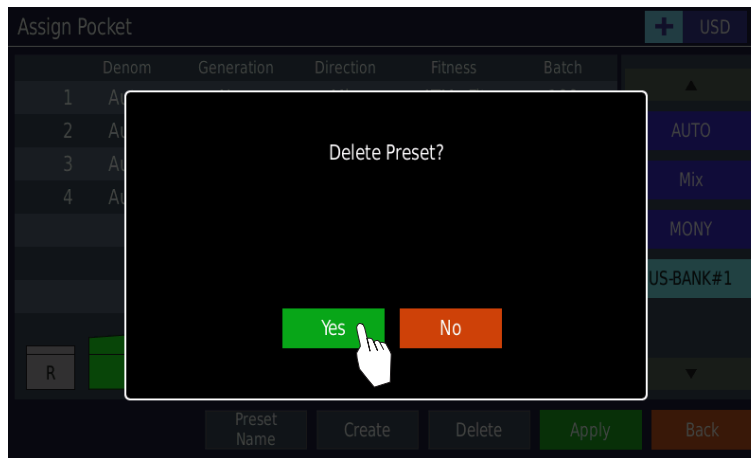

- Return to the initial pocket setting screen and click **[Apply]** to save the changes.


### ► Batch Setting

In free count mode, you can set a batch for each pocket to load the number of banknotes.

※ This menu is only available in free count mode.


Since the batch setting of the pocket setting is used in the denomination count and normal deposit mode, refer to the [Assign Pocket](#) section for explanation.

- Press the menu icon on the count standby screen in free count mode.

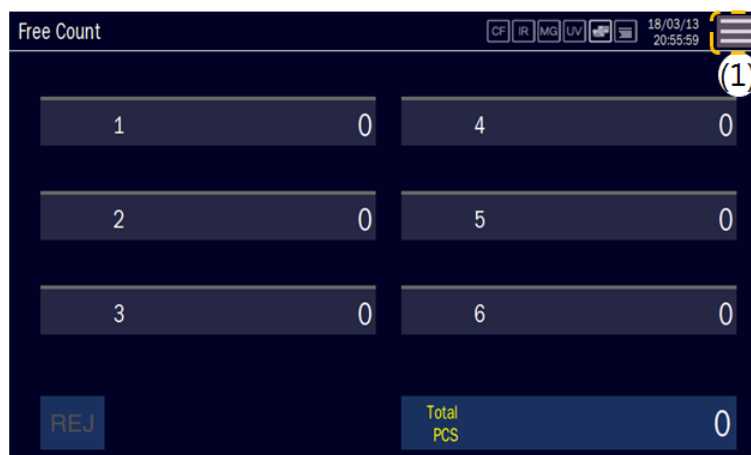

- Press **[Batch Setting]** under 'Main Menu' to go to the batch setting screen.




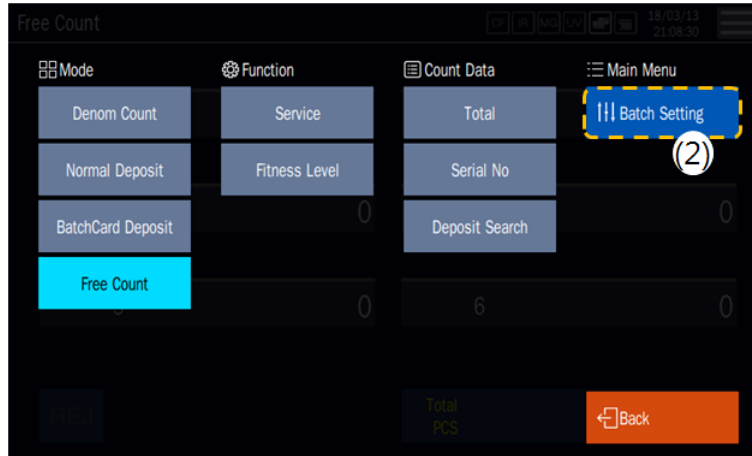


3) Select the module (main/expansion) and pocket (P1-4) you want to set.



4) Enter the number of batches you want and press the **[OK]** button on the keypad.

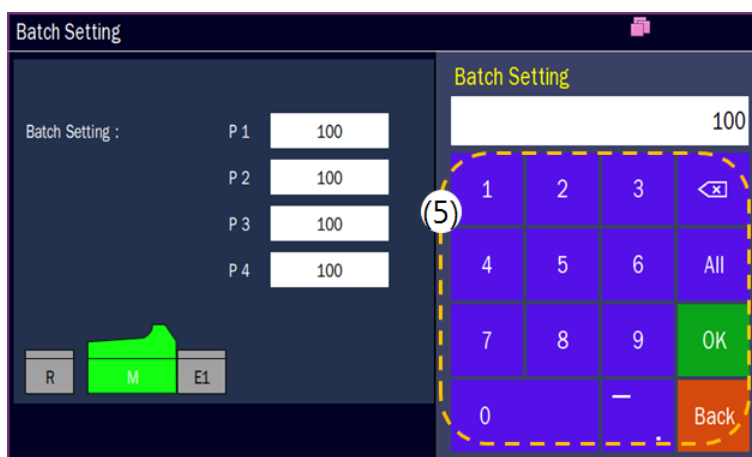

5) Click **[OK]** on the initial batch setting screen to apply the changes.

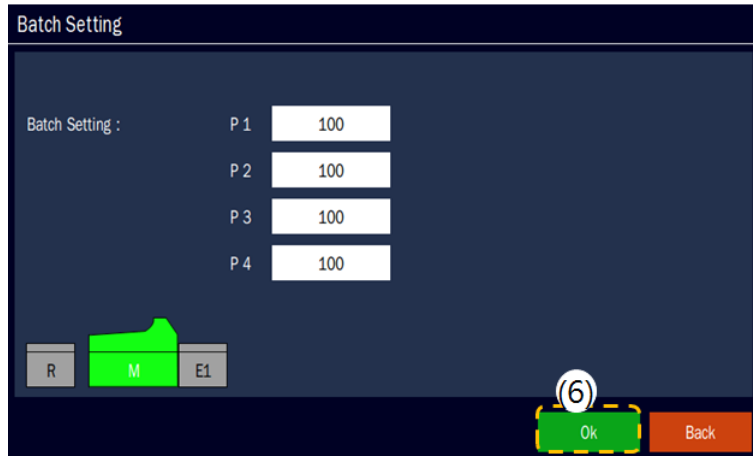



## 4. Verify Count Information

In this machine, you can check, search, and print out detailed count information through the 'Count data (total, Serial No., deposit search, Count History)' menu and the 'Main menu (count detail, print, clear).

### 4.1. Count Data

In the 'Count Data' menu, you can check the four count data: **total, Serial No., deposit search and count history.**


Use the menu entry icon (☰) to access the 'Count Data'.

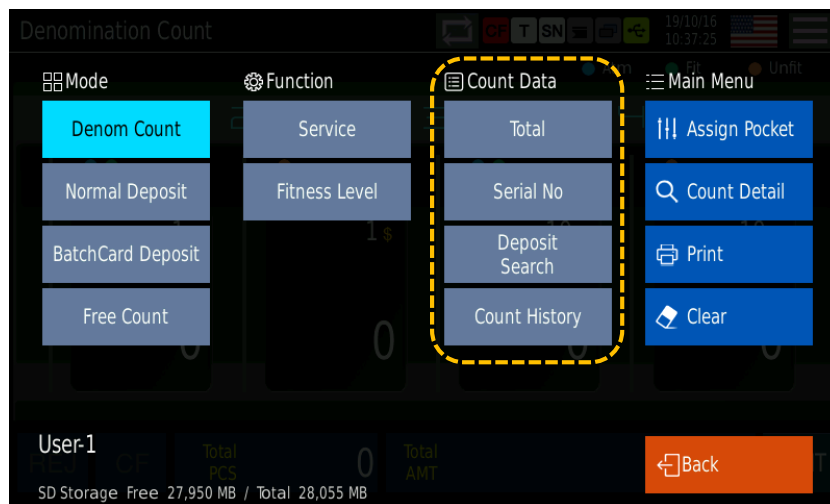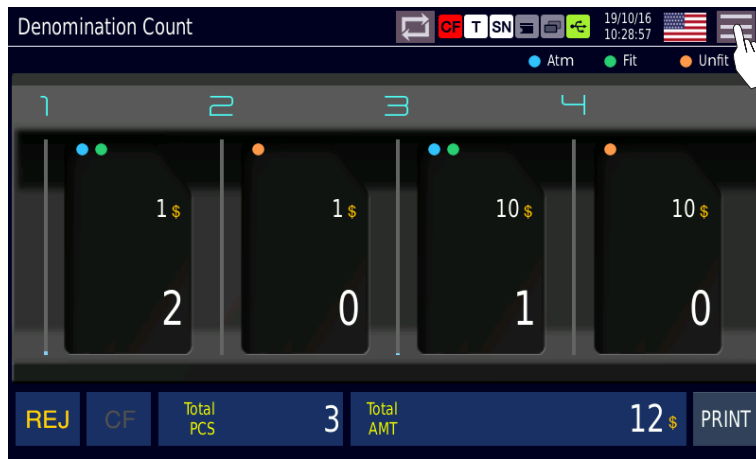

► **Total**

You can check the added count information on the total screen.

- 1) After opening the menu window, click the **[Total]** button under 'Count Data'.

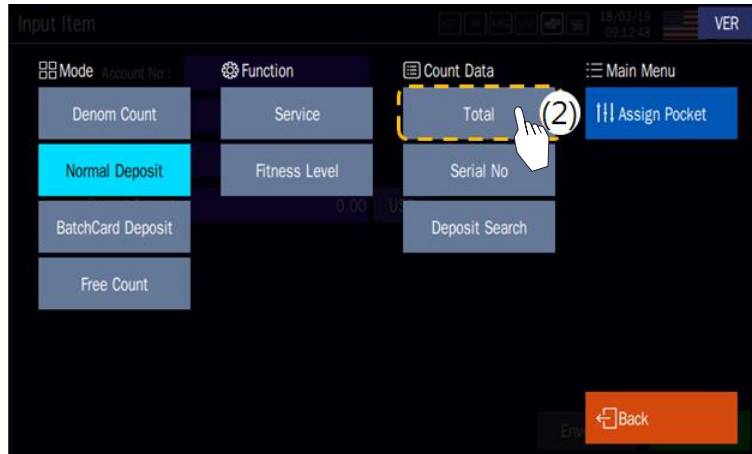

- 2) In the total window, you can check the total data of the deposits that have been made so far.

Total						+	USD
Denom	Atm	Fit	Unfit	Count	Amount	Total	
1	2083	950	96	3129	3,129	Total	
2	4	225	23	252	504	Sub Total	
5	366	97	4	467	2,335	Grand Total	
10	360	1	0	361	3,610	Old/New	
20	81	82	7	170	3,400	Print	
50	14	0	0	14	700	Back	
100	0	6	4	10	1,000		
Total	2908	1361	134	4403	14,678		


No.	Name	Function
(1)	[Currency setting]	Click this icon to select the currency to search.
(2)	[Total]	Accumulate and display the count results up to now.
(3)	[Sub Total]	Accumulate and display the total details. ※ The accumulated values of the total are cleared.
(4)	[Grand Total]	Accumulate and display the Sub total details. ※ The accumulated values of the Sub total are cleared.

(5)	[Old/New]	Click this button to view the data of Old/New separately. ※ If this button is light blue, new/old data is visible, and if blue, it is not visible.
(6)	[Print]	Click this button to print total subtotal, grand total data.
(7)	[Back]	Click this button to return to the previous screen.


► **Serial No.**

On the serial number screen, you can check the information of Serial No. counted within a certain period.

- 1) After opening the menu window, click the **[Serial No.]** button under 'Count Data'.

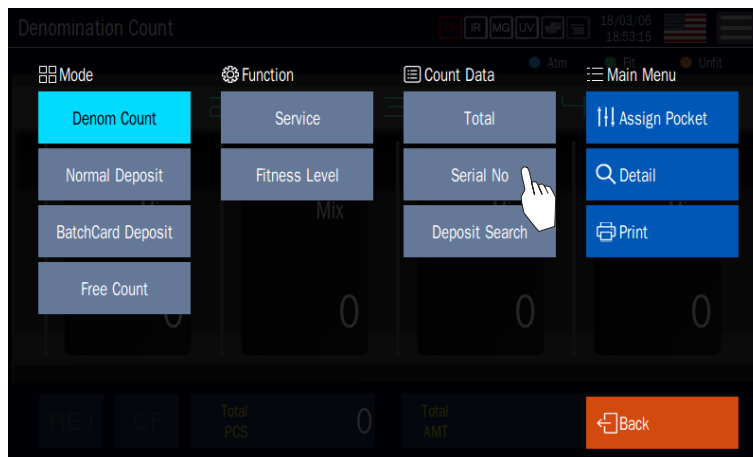


- 2) In the Serial No. window, you can set a period and search for the Serial No. of the deposit made within that period.

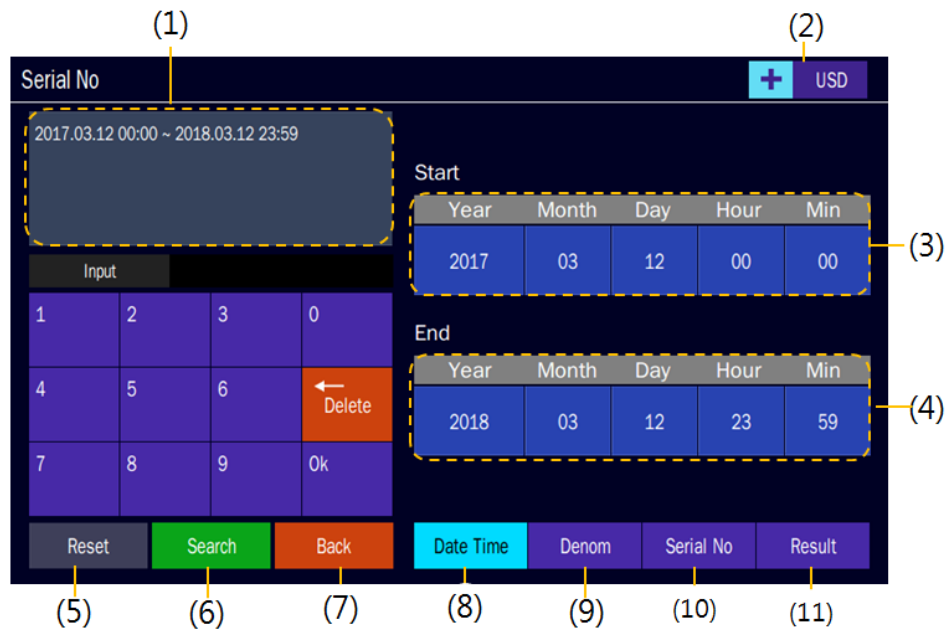


No.	Name	Function
(1)	Display search conditions	Displays the activated search conditions.
(2)	[Currency setting]	Click this icon to select the currency to search.
(3)	[Start]	Click this area to enter the start time of the search period.
(4)	[End]	Click this area to enter the end time of the search period.
(5)	[Reset]	Click this button to reset the search conditions.
(6)	[Search]	Click this button to perform search with the set search conditions.
(7)	[Back]	Click this button to return to the previous screen.
(8)	[Date Time] tab	Press this tab to set the search time.
(9)	[Denom] tab	Press this tab to set the search Denom.
(10)	[Serial No.] tab	Press this tab to enter the Serial No. to search.
(11)	[Result] tab	Press this tab to set the fitness conditions to search.

3) To enter the date and time to search, click the **[Date Time]** tab.

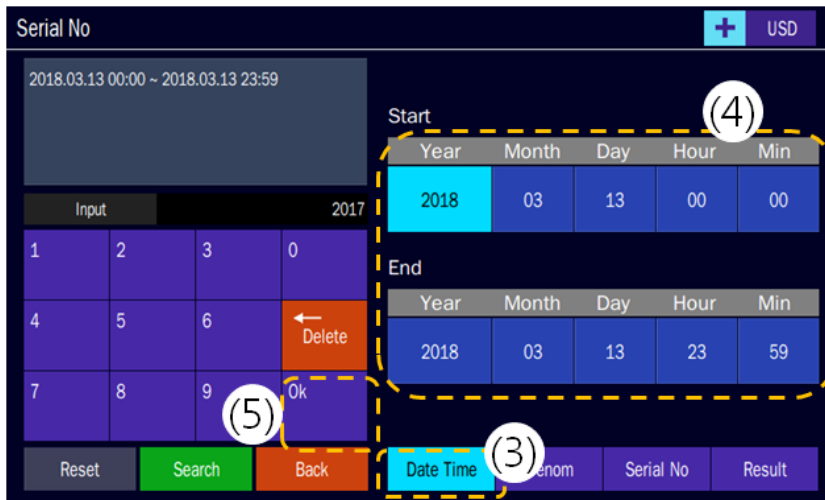

- Select **[Year]**, **[Month]**, **[Day]**, **[Hour]** and **[Min]** of 'Start' and 'End' to enter the start/end date and time on the left keypad.
- When the setting is complete, press the **[Ok]** button on the keypad to apply.

4) Click the **[Denom]** tab to set the denomination to search.

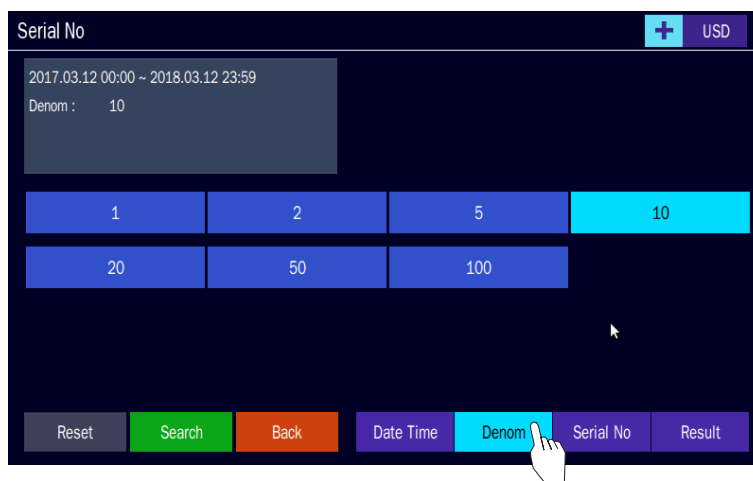

- Click and select the denomination you want to enter in the search conditions, and it will be added to the search condition display window.


5) Click the **[Serial No.]** tab to search for a specific Serial No.

※ You can use the '\*' operator in Serial No. search.

E.g) Entering "L469\*\*\*\*\*" searches for a 9-digit Serial No. starting with "L469".



6) Click the **[Result]** tab to add the fitness result to the search conditions.

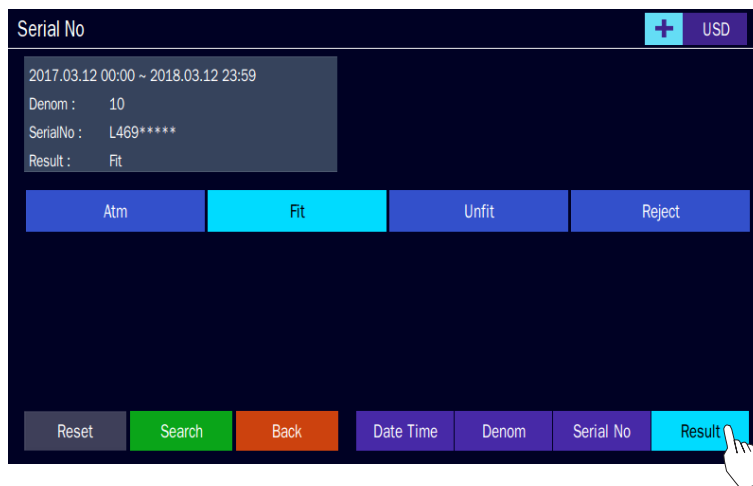

→ If you click the item you want to add among **[Atm]**, **[Fit]**, **[UnFit]** and **[Reject]**, it will be added to the search condition window.

7) When the search condition addition is complete, click the **[Search]** button to search using the entered conditions.





SerialNo Result					
No.	Denom	SerialNo	Result	Date Time	
577	1	??4???????	Fit	2018-02-08 18:13:16	
578	1	L46926501K	Unfit	2018-02-08 18:13:16	
579	20	AA15914456G	Unfit	2018-02-08 18:13:16	
580	2	L27090113A	Fit	2018-02-08 18:13:16	
581	1	B58547199F	Atm	2018-02-08 18:13:16	
582	10	JA33595199A	Fit	2018-02-08 18:13:16	
583	2	I02653746A	Fit	2018-02-08 18:13:16	
584	2	L27090160A	Fit	2018-02-08 18:13:16	


73/252

Print Back

► **Deposit Search**

On the deposit search screen, you can search for deposit information that meets the selected conditions.


- 1) After opening the menu window, click the **[Deposit Search]** button under 'Count Data'.

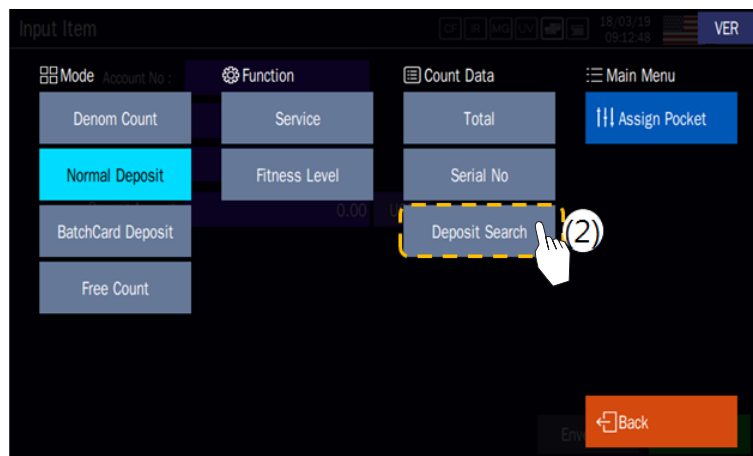

- 2) In the deposit search window, press and enter the required search condition among **[Start Time]**, **[End Time]** and **[Account No.]**.

When the search conditions are entered, click the **[Search]** button to start the search.

- ※ If you do not enter the search period, total period, or account number, the search will be performed for all account numbers.

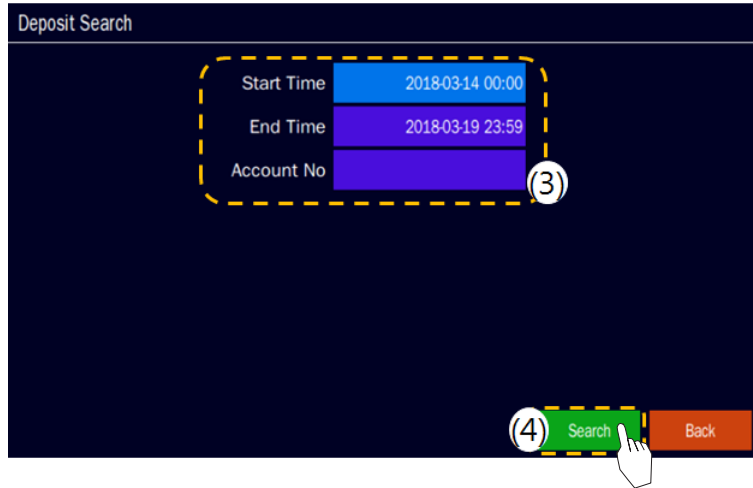


3) When the deposit information search is completed, the search result screen appears.

Deposit View - Result

Date Time	Account No	Envelope	Amount Claimed	Deposit Total
2020-01-10 14:32:40	KIM-#01	4	30.00	94.00
2020-01-10 14:34:29		0	0.00	30.00
2020-01-10 14:36:50	KIM-#3	0	35.00	30.00
2020-01-10 14:39:40	KIM-#04	0	31.00	31.00

USD    Detail    Envelope Detail    Print    Back

4) Click to select the item you want to see the deposit information in more detail and click **[Detail]** to view the detailed information of the item.

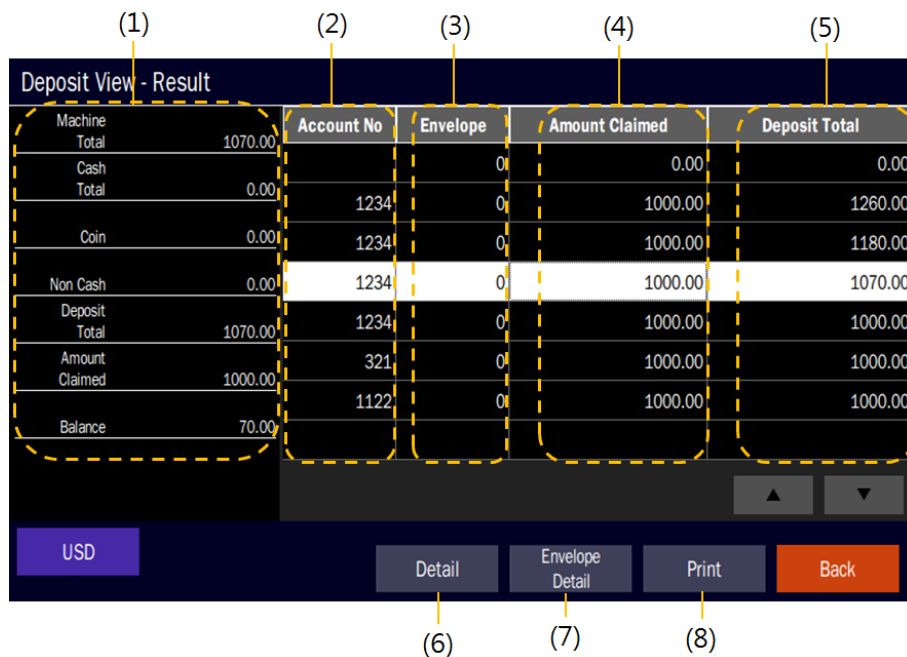


No.	Name	Function
(1)	Display additional information	Displays additional information (equipment amount, banknote amount, coin, Non Cash deposit, Deposit Total, Amount Claimed, balance) of the selected deposit information.
(2)	Account No.	Displays the account No. you entered when depositing.
(3)	Envelope	For envelope deposit, the number of envelope deposits is displayed.
(4)	Amount Claimed	Displays Amount Claimed.
(5)	Deposit Total	Displays the actual amount deposited.
(6)	[Deposit information scroll]	If the searched count information does not fit in one screen, you can click this icon to move up (▲) down (▼).
(7)	Currency indication	Displays the set currency.
(8)	[Detail]	Click this button to view detailed information by denomination of the selected deposit information. ※ If there is no selected item, the screen does not switch.
(9)	[Envelope Detail]	Click this button to view the Envelope Detail of the selected deposit information. ※ If the envelope item is "0", the screen does not switch.
(10)	[Print]	Click this button to print the deposit information. ※ External printer connection is required.
(11)	[Back]	Click this button to return to the previous screen.


► **Count History**

On the count history screen, you can check the details counted within a certain period.

- 1) After opening the menu window, click the **[Count History]** button under 'Count Data'.

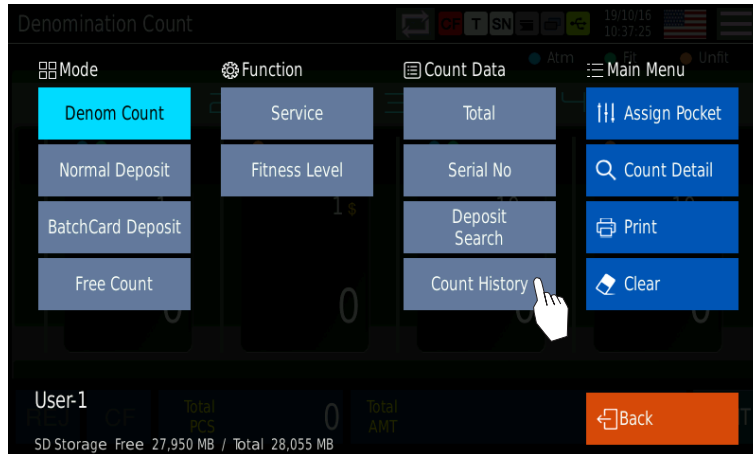

- 2) When the screen is switched to the Count History screen, click the **[Search]** button to move to the window to set the search period.

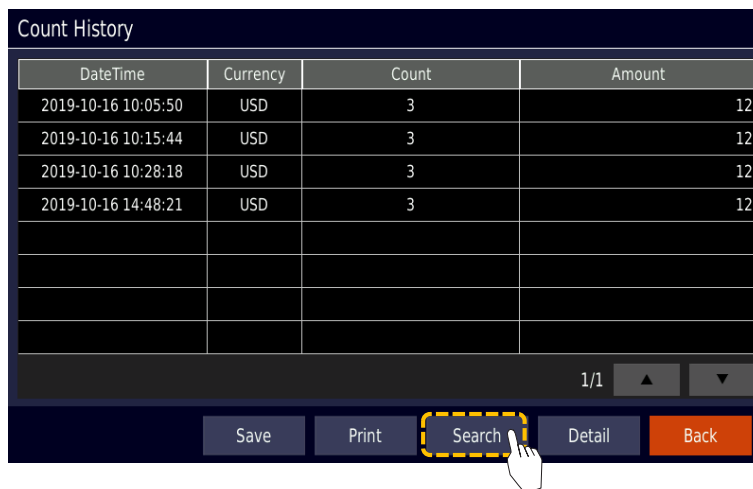

- 3) Press and enter each item (year, month, day, hour, minute) of **[Start Time]** and **[End Time]** in the search period (Date Time) setting window, and enter **[Ok]** to apply.

Date Time

Start Time

Year	Month	Day	Hour	Min
2019	06	01	00	00

End Time

Year	Month	Day	Hour	Min
2019	10	16	23	59

Ok Back

- 4) Count history within the search period is displayed.

Count History

DateTime	Currency	Count	Amount
2019-07-29 15:17:07	NOK	19	3800
2019-07-29 15:18:09	NOK	22	2200
2019-07-29 15:18:30	NOK	16	800
2019-07-29 15:19:01	AUD	97	485
2019-07-29 15:40:06	AUD	85	425
2019-07-29 15:40:19	AUD	2	200
2019-07-29 15:41:31	NOK	21	4200
2019-07-29 15:41:45	NOK	21	2100

1/10 ▲ ▼

Save Print Search Detail Back



No.	Name	Function
(1)	DateTime	Displays the date and time the count was made.
(2)	Currency	Displays the counted currency.
(3)	Count	Displays the number of counted banknotes.
(4)	Amount	Displays the total amount of counted banknotes.
(5)	[Count history scroll]	If the searched count history does not fit in one screen, you can click this icon to move up (▲) down (▼).
(6)	[Save]	Press this button to save the count history to the external memory (USB). ※ USB memory connection is required.
(7)	[Print]	Press this button to print the count history. ※ External printer connection is required.
(8)	[Search]	Click this button to set/change the search period.
(9)	[Detail]	Click this button to view the Count Detail of the selected item. ※ If there is no selected item, the screen does not change.
(10)	[Back]	Click this button to return to the previous screen.

## 4.2. Main Menu

In the 'Main Menu', you can check Count Detail information, print or delete count information.

Use the menu entry icon (☰) to access the 'main menu'.


- ※ In free count mode, Count Detail, Print, and Clear items are not displayed.
- ※ For the explanation of 'Assign Pocket' (Denom Mode, Normal Deposit Mode) and 'Batch Setting' (Free Count Mode) in the main menu, refer to the [Assign Pocket](#) and [batch setting](#) sections respectively.

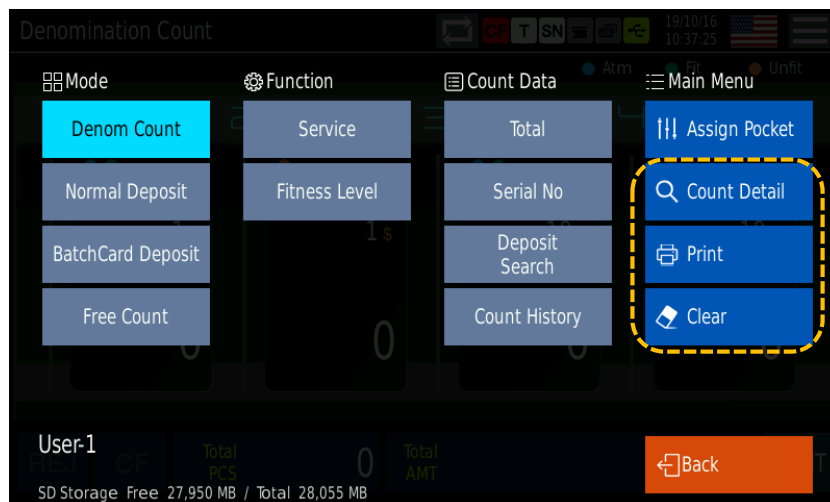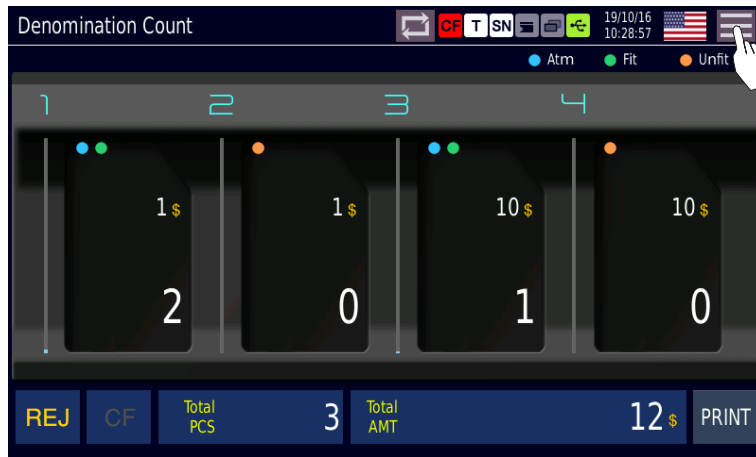

### ► Count Detail

On the Count Detail screen, you can check detailed information about the count result.

- 1) After opening the menu window, press the **[Count Detail]** button under the 'Main Menu'.

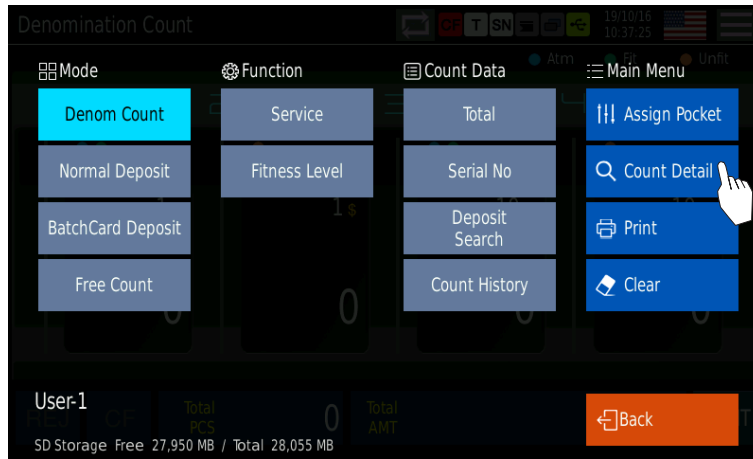

2) Switched to the Count Detail screen.

Count Detail						
Denom	Atm	Fit	Unfit	Count	Amount	Old/New
1	0	0	0	0	0	Old/New
2	0	0	0	0	0	
5	0	0	0	0	0	
10	0	0	0	0	0	Serial No
20	0	0	0	0	0	
50	0	0	0	0	0	▲
100	0	0	0	0	0	▼
Total	0	0	0	0	0	Back

No.	Name	Function
(1)	Denom	Displays the counted currency.
(2)	Atm	Displays the number of counted ATM sheets.
(3)	Fit	Displays the number of counted Fit sheets.
(4)	Unfit	Displays the number of counted Unfit sheets.
(5)	Count	Displays the number of counted banknotes.
(6)	Amount	Displays the amount of counted banknotes.
(6)	[Old/New]	Press this button to view the new/old count information. Press this button once more to release the selection and return to the previous Count Detail screen. ※ You can select new and old sheets and Serial No. in duplicate.
(7)	[Serial No.]	Press this button to view count information based on Serial No. Press this button once more to release the selection and return to the previous Count Detail screen.

		※ You can select new and old sheets and Serial No. in duplicate.
(8)	[Count information scroll]	If the searched count information does not fit in one screen, you can click this icon to move up (▲) down (▼).
(9)	[Back]	Click this button to return to the previous screen.

3) If you click the **[Old/New]** button to select, you can see the Count Detail information including the new/old information.

Count Detail						
Denom	Atm	Fit	Unfit	Count	Amount	Old/New
1	0	0	0	0	0	
2	0	0	0	0	0	
5	0	0	0	0	0	
5N	0	0	0	0	0	
5S	0	0	0	0	0	
10	0	0	0	0	0	
10N	0	0	0	0	0	
10S	0	0	0	0	0	
20	0	0	0	0	0	
20N	0	0	0	0	0	
20S	0	0	0	0	0	
50	0	0	0	0	0	
50N	0	0	0	0	0	
50S	0	0	0	0	0	
100	0	0	0	0	0	
100N	0	0	0	0	0	
100S	0	0	0	0	0	
Total	0	0	0	0	0	Back


4) If you click the **[Serial No.]** button to select it, you can see the Count Detail information including the Serial No. information.

Count Detail						
NO.	CRCY	DENOM	TIME	SKEW	SERIAL NO.	
						Old/New
						Serial No.
						▲
						▼
						Back



► **Print**

This product can print count information by connecting an external printer.

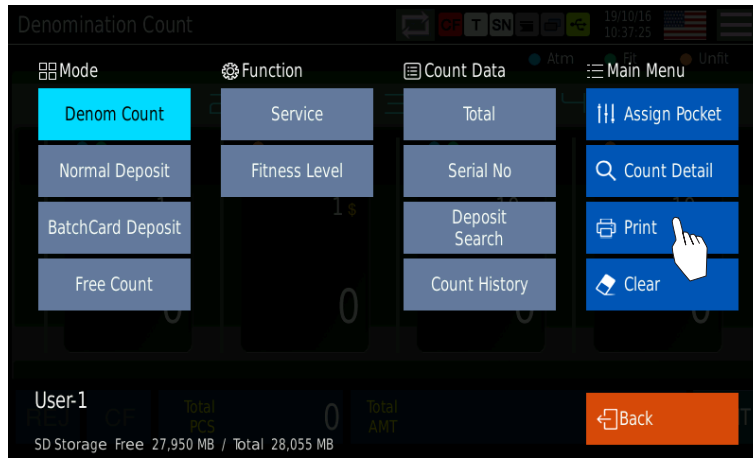

Below are print samples for four different count modes.

※ The print format may vary depending on the shipping country and program version.

- **Denomination count (fitness)**

```

-----
Date :      2019-11-06  10:37:44
Machine ID :      L17H01_00002
User ID :      User-1
-----
----- Fitness Total -----
Currency :      KRW
-----
DENOM  ATM  FIT UNFIT  TOTAL
1000   0    1    3    4
5000   1    0    1    2
10000  1    7    2   10
50000  1    8    0    9
-----
Fitness Total
      3   16    6   25
-----
Total
      25   564000
-----
Total Amount
      564000
-----
    
```

- Denomination count (amount)

```

-----
Date :      2019-11-06  10:36:14
Machine ID :      L17H01_00002
User ID :      User-1
-----
----- Value Count Total -----
Currency :      KRW
-----
Denom      Count      Amount
  1000         4      4000
  5000         2     10000
 10000        10    100000
 50000         9    450000
-----
Total
              25      564000
-----
Total Amount
                          564000
-----
    
```

- Envelope deposit

```

-----
Date :      2019-11-06  10:39:25
Machine ID :      L17H01_00002
User ID :      User-1
-----
          [ENVELOPE TOTAL]
START TIME : 2019-11-06 10:39:01
END TIME   : 2019-11-06 10:39:25
PROCESS TIME :      00:00:05
CURRENCY   :      KRW
ENVELOPE NO      1
ENVELOPE AMOUNT  0.00
-----
DENOM  ATM  FIT  UNFIT  TOTAL
  1000   0   1   1     2
  5000   0   0   0     0
 10000   0   7   0     7
 50000   1   1   0     2
-----
FITNESS TOTAL
          1   9   1   11
-----
TOTAL
              11      172000
-----
DENOM  REJECT  AMOUNT
  5000     6    30000.00
 50000     1    50000.00
-----
REJECT TOTAL
              7      80000.00
COIN
NON-CASH
                          0.00
                          0.00
-----
TOTAL AMOUNT
                          252000.00
-----
    
```

- **Single deposit**

```

-----
Date :      2019-11-06 10:38:34
Machine ID :      L17H01_00002
User ID :      User-1
-----

```

```

-----
                [DEPOSIT TOTAL]
START TIME : 2019-11-06 10:38:08
END TIME :   2019-11-06 10:38:34
PROCESS TIME :      00:00:06
CURRENCY :      KRW
ACCOUNT NO :
ITEM NO :      1
LOCATION NO :      0001
DEPOSIT AMOUNT      0.00
-----

```

DENOM	ATM	FIT	UNFIT	TOTAL
1000	0	3	0	3
5000	1	0	1	2
10000	1	7	1	9
50000	2	7	0	9

```

-----
FITNESS TOTAL
      4      17      2      23
-----

```

```

-----
TOTAL
                23      553000
-----

```

DENOM	REJECT	AMOUNT
1000	2	2000.00
10000	4	40000.00

```

-----
REJECT TOTAL
                6      42000.00
-----

```

```

COIN                0.00
NON-CASH            0.00
-----

```

```


-----
TOTAL AMOUNT
                595000.00
-----

```

**► Clear**

Clear the current (to?) count information.

※ A window asking if you want to delete does not appear and the deletion is carried out immediately.

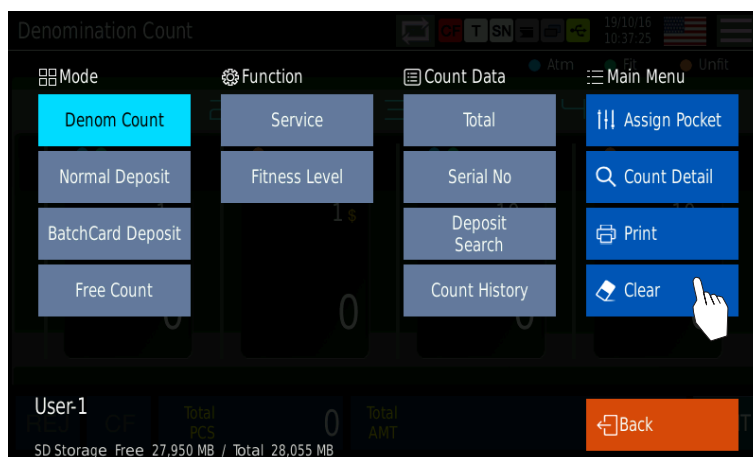

## 5. Maintenance

### 5.1. Daily check

To use the product effectively, please perform the following inspection at least once a day. If problems are found, contact a maintenance representative.

**Warning**

- Perform the following measures before inspection or cleaning.
  - (1) Turn off the product.
 

Electric shock may result in injury or death if severe.
  - (2) Check if the motor, belt, and rollers are all stopped.
 

Clothes caught in moving belts or rollers may cause injuries or death if severe.

**Caution**

- Do not touch the kickback zone or tip of the cover when closing the cover of the product. Your fingers may get injured.
- When closing the cover, hold the handle of the cover.

<p>▶ <b>Daily check items</b></p> <ol style="list-style-type: none"> <li>(1) Is the input smooth?</li> <li>(2) Are the belts and rollers damaged?</li> <li>(3) Is there no dust or foreign matter in the sensor or the detector?</li> <li>(4) Are the screws and bolts tight?</li> <li>(5) Are the door and cover closed tightly?</li> </ol>	<p>▶ <b>Major check items</b></p> <ol style="list-style-type: none"> <li>(1) <b>Device:</b> Reco unit, hopper, motor, loading unit, etc.</li> <li>(2) <b>Display:</b> LCD, FND, lamps etc.</li> <li>(3) <b>Running parts:</b> roller, gear, belt, bearing, etc.</li> <li>(4) <b>Various switches</b></li> </ol>
--	---

## 5.2. Cleaning

While the product is in use, foreign matter such as dust and pieces of paper accumulate inside and outside, which affects the operation of the device. We recommend cleaning at least once a day to prevent abnormal operation or malfunction.

### Warning

- Perform the following measures before inspection or cleaning.

(1) Turn off the product.

Electric shock may result in injury or death if severe.


(2) Check if the motor, belt, and rollers are all stopped.

Clothes caught in moving belts or rollers may cause injuries or death if severe.

### Caution

- Do not touch the kickback zone or tip of the cover when closing the cover of the product  
Your fingers may get injured.
- When closing the cover, hold the handle of the cover.

### ► Hopper Cleaning

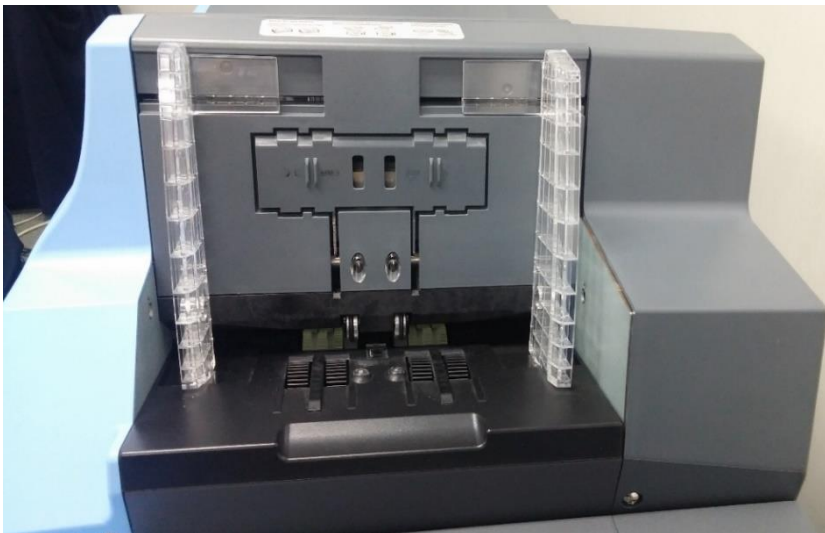

Hopper Sensor dust cleaning.

Clean stains if the feed roller is contaminated.

► **Cleaning inside Reco Unit**



- Clean CIS surface dust.
- Clean Sensor surface dust.
- Clean dust accumulated in the US Sensor groove.
- Clean stains if the roller is contaminated.

► **Cleaning banknote input path (top/bottom)**



Clean dust on the surface of Path Sensor (Gate Sensor) and Count Sensor.  
Clean stains if the roller is contaminated.



## 6. Troubleshooting

### 6.1. Check and handle errors (Data)





If errors such as count error or paper jam occur, the error data is saved in the device.

In addition, reject data is saved in the device when notes are rejected.

You can check and process error data and reject data in **[Error Log]**, **[Reject Log]** of 'Service' menu **[Data]** tab.


- ※ Please refer to **Chapter 5** (Management and Setting Function) of this manual for details on device management and settings.
- ※ For more detailed information on the service menu, refer to the separate <Service Function Software Manual>.

You can access **[Error Log]**, **[Reject Log]** through the menu entry icon (☰), and need to enter your password (4 digits).

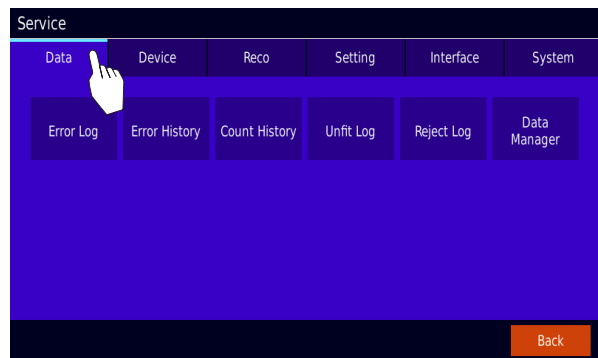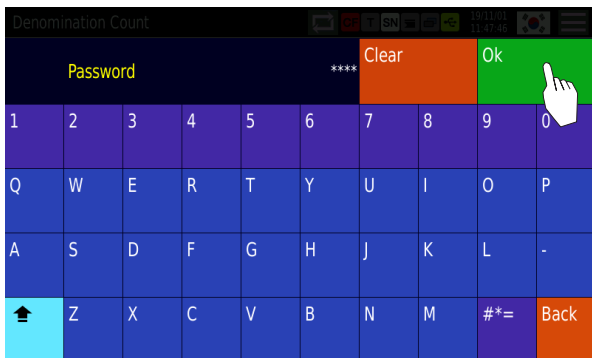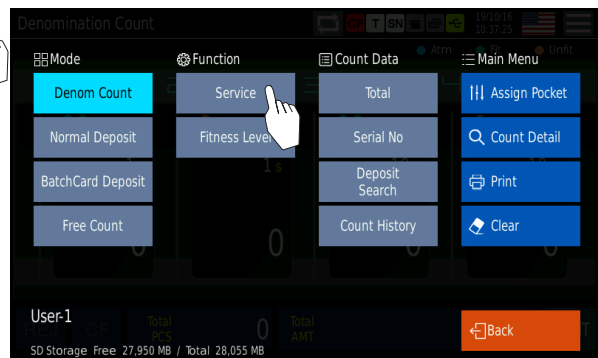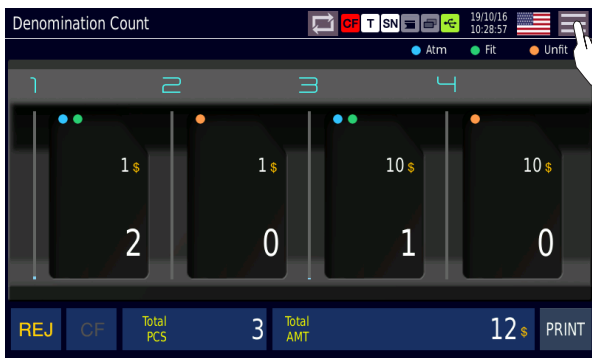

## ► Error Log

Pressing the **[Error Log]** button switches to the screen where you can check the error data.

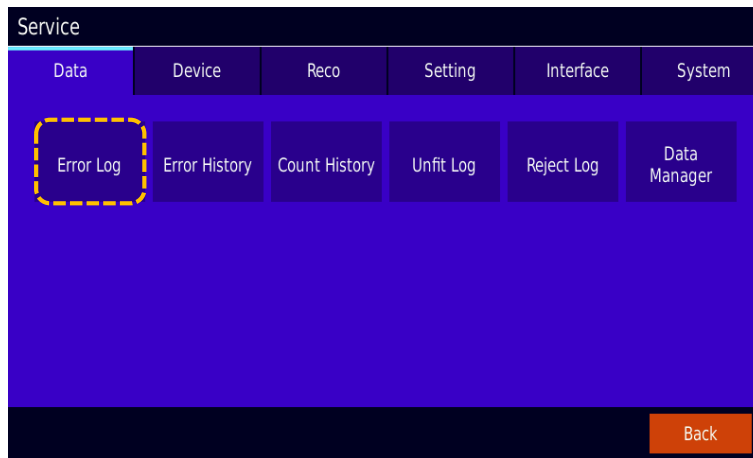

Error Log		
Code	Description	Count
0x1144142A	Invalid stacker [Main] [N Remain3A-S]	3
0x1144142E	Refeed stacker [Main] [N Remain3A-S]	3
0x1123152C	Not batch [Main] [N Remain2A-S]	2
0x1143142A	Invalid stacker [Main] [N Remain1A-S]	2
0x2240142E	Refeed stacker [Strapper-1] [N Remain1A-S]	1
0x2240152A	Invalid stacker [Strapper-1] [N Remain2A-S]	1
0x2240152E	Refeed stacker [Strapper-1] [N Remain2A-S]	1
0x22300213	Response time out [Strapper-1] [S/C <-> P/C (CAN)]	1

1 / 3

Position Clear Save Print Back

- **Code:** Displays the code of the error that has occurred.
- **Description:** Displays the type of error that has occurred.
- **Count:** Displays count information for each error item.
- **[Position]:** Check the position and details of the selected error item.
- **[Clear]:** Deletes all error logs.
- **[Save]:** Saves the error log in an external USB memory.
- **[Print]:** Prints the error log list to an external printer.
- **[Back]:** Return to the previous screen.

1) Select the item you want to check from the error log and click the **[Position]** button.


Error Log

Code	Description	Count
0x1144142A	Invalid stacker [Main] [N Remain3A-S]	3
0x1144142E	Refeed stacker [Main] [N Remain3A-S]	3
0x1123152C	Not batch [Main] [N Remain2A-S]	2
0x1143142A	Invalid stacker [Main] [N Remain1A-S]	2
0x2240142E	Refeed stacker [Strapper-1] [N Remain1A-S]	1
0x2240152A	Invalid stacker [Strapper-1] [N Remain2A-S]	1
0x2240152E	Refeed stacker [Strapper-1] [N Remain2A-S]	1
0x22300213	Response time out [Strapper-1] [S/C <-> P/C (CAN)]	1

1 / 3

Position Clear Save Print Back

2) You can check the position of the error.

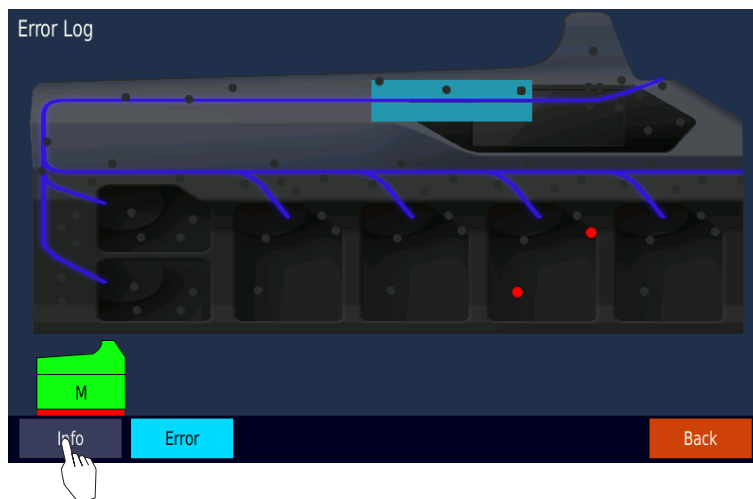

3) Click the **[Info]** button to check the error code and details.

※ For an explanation of each error code, refer to the [error code table](#).

Error Log

Error Code 11-44-14-2A

Error Message Invalid stacker [Main] [N Remain3A-S]


Instruction Please check FND Display of pocket showing ERR to be remove note from that pocket. after that press RESET button on the screen.

Info Error Back

► **Error processing**


When an error occurs, an error screen as shown below appears.

This allows you to check the cause and position of the error, and process the error according to the instructions.

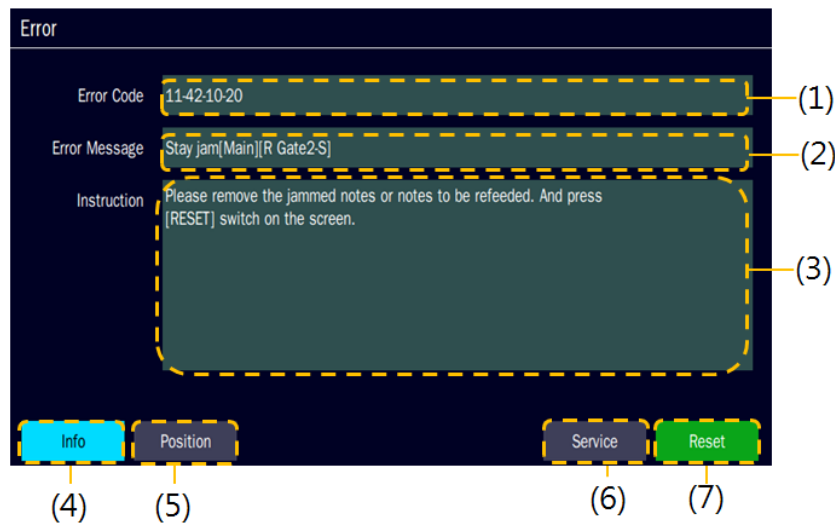

[Error pop-up screen]

No.	Name	Function
(1)	Error Code	Displays the error code.
(2)	Error Message	Displays the cause of the error. ※ Error phenomenon [Error generating module] [Error generating device]
(3)	Instruction	Describes how to resolve the error.
(4)	[Info]	Displays details of the error.
(5)	[Position]	Displays the position of the error.
(6)	[Service]	Enters the service menu (password input required).
(7)	[Reset]	Resets the error. If paper jam occurs, press this button after removing the jammed notes.

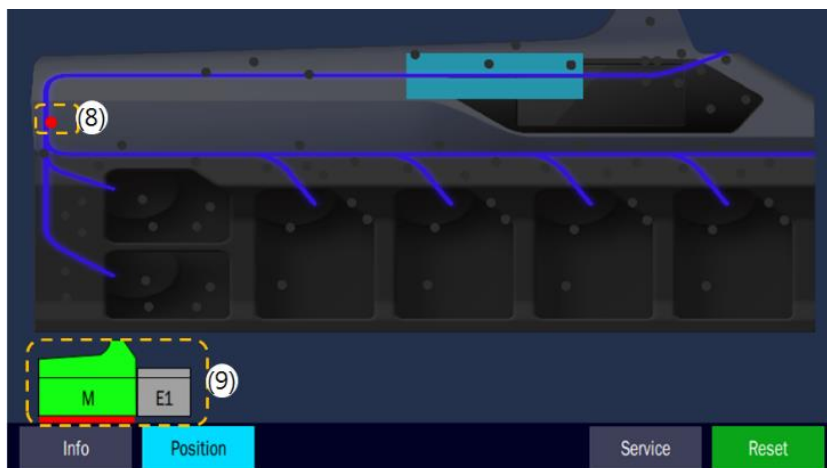

[Error Position Screen]


No.	Name	Function
(8)	Error position	Displays the error positions with red dots.
(9)	[Select module]	Select each module to check the error positions for each module.
(10)	[Service]	Enters the service menu (password input required).
(11)	[Reset]	Resets the error. If paper jam occurs, press this button after removing the jammed notes.

► **Strapper related error explanation and action guide**

• **Safety Pocket bill presence notification**

After an error occurred, the bill in the conveying path was discharged to the Safety Pocket.


Action: Remove the bill from Safety Pocket.



• **No strapper binding paper error**

Display if there is no binding paper on the binding part


Action: Replenish the bondage area.



• **Strapper printer error**

Displayed when an error occurs due to printer module failure or insufficient printing ink.


Action: Check ink module installation / Check cable contact / Check power switch



• **Strapper tying module heater status notification**

Display when the heater temperature is low.

Action: Turn on the device and wait for it to disappear, and reboot when the status is maintained.



► Error Code Table

No.	Error code	Phenomenon	Description
1	111214A0	Counting data error	Counting error [Reject Remain-1]
2	111215A0	Counting data error	Counting error [Reject Remain-2]
3	111314A0	Counting data error	Counting error [Normal-1 Remain-1A]
4	111315A0	Counting data error	Counting error [Normal-1 Remain-2B]
5	111316A0	Counting data error	Counting error [Normal-1 Remain-1A]
6	111317A0	Counting data error	Counting error [Normal-1 Remain-2B]
7	111414A0	Counting data error	Counting error [Normal-2 Remain-1A]
8	111415A0	Counting data error	Counting error [Normal-2 Remain-2B]
9	111416A0	Counting data error	Counting error [Normal-2 Remain-1A]
10	111417A0	Counting data error	Counting error [Normal-2 Remain-2B]
11	1122142C	Not batch	Number of batches not reached [Reject Remain-1]
12	1122152C	Not batch	Number of batches not reached [Reject Remain-2]
13	11223001	Cover is open	Door is open [Top Cover Switch]
14	1123142C	Not batch	Number of batches not reached [Normal-1 Remain-1A]
15	1123152C	Not batch	Number of batches not reached [Normal-1 Remain-2B]
16	1123162C	Not batch	Number of batches not reached [Normal-1 Remain-1A]
17	1123172C	Not batch	Number of batches not reached [Normal-1 Remain-2B]
18	1124142C	Not batch	Number of batches not reached [Normal-2 Remain-1A]
19	1124152C	Not batch	Number of batches not reached [Normal-2 Remain-2B]
20	1124162C	Not batch	Number of batches not reached [Normal-2 Remain-1A]
21	1124172C	Not batch	Number of batches not reached [Normal-2 Remain-2B]
22	11243001	Cover is open	Door is open [Main Cover Switch]
23	11300413	Response time out	Response time out [APL↔S/C]
24	11300414	Failed to connect	Failed to connect [APL↔S/C]
25	11300C13	Response time out	Response time out [S/C↔Color Sensor]
26	11300C14	Failed to connect	Failed to connect [S/C↔Color Sensor]
27	11320213	Response time out	Response time out [S/C↔P/C (CAN)]
28	11320214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
29	11330213	Response time out	Response time out [S/C↔P/C (CAN)]
30	11330214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
31	11340213	Response time out	Response time out [S/C↔P/C (CAN)]
32	11340214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]

33	11401023	Hopper jam	Input error in hopper [Hopper]
34	11401120	Stay jam	Stay jam [Enter]
35	11401220	Stay jam	Stay jam [Insert1]
36	11401320	Stay jam	Stay jam [Insert2]
37	11401420	Stay jam	Stay jam [Insert3]
38	11401520	Stay jam	Stay jam [InsertTotal]
39	11401620	Stay jam	Stay jam [Jam]
40	11401621	Not arrive jam	Not arrive jam [Jam]
41	11401720	Stay jam	Stay jam [Separator]
42	11401721	Not arrive jam	Not arrive jam [Separator]
43	11401C20	Stay jam	Stay jam [Insert4]
44	11401D20	Stay jam	Stay jam [Insert5]
45	11401E20	Stay jam	Stay jam [InsertTR]
46	11421020	Stay jam	Stay jam [Reject Gate-2]
47	11421021	Not arrive jam	Not arrive jam [Reject Gate-2]
48	11421120	Stay jam	Stay jam [Reject Count-1]
49	11421121	Not arrive jam	Not arrive jam [Reject Count-1]
50	11421220	Stay jam	Stay jam [Normal Gate-1]
51	11421221	Not arrive jam	Not arrive jam [Normal Gate-1]
52	11421320	Stay jam	Stay jam [Reject Count-2]
53	11421321	Not arrive jam	Not arrive jam [Reject Count-2]
54	1142142B	Wrong stacker	Wrong stacking [Reject Remain-1]
55	1142152B	Wrong stacker	Wrong stacking [Reject Remain-2]
56	11431020	Stay jam	Stay jam [Normal-1 Gate-2]
57	11431021	Not arrive jam	Not arrive jam [Normal-1 Gate-2]
58	11431120	Stay jam	Stay jam [Normal-1 Count-1]
59	11431121	Not arrive jam	Not arrive jam [Normal-1 Count-1]
60	11431220	Stay jam	Stay jam [Normal-2 Gate-1]
61	11431221	Not arrive jam	Not arrive jam [Normal-2 Gate-1]
62	11431320	Stay jam	Stay jam [Normal-1 Count-2]
63	11431321	Not arrive jam	Not arrive jam [Normal-1 Count-2]
64	1143142B	Wrong stacker	Wrong stacking [Normal-1 Remain-1A]
65	1143152B	Wrong stacker	Wrong stacking [Normal-1 Remain-2B]
66	1143162B	Wrong stacker	Wrong stacking [Normal-1 Remain-1A]
67	1143172B	Wrong stacker	Wrong stacking [Normal-1 Remain-2B]
68	11441020	Stay jam	Stay jam [Normal-2 Gate-2]
69	11441021	Not arrive jam	Not arrive jam [Normal-2 Gate-2]
70	11441120	Stay jam	Stay jam [Normal-2 Count-1]
71	11441121	Not arrive jam	Not arrive jam [Normal-2 Count-1]
72	11441220	Stay jam	Stay jam [Normal-2 Gate-Next]
73	11441221	Not arrive jam	Not arrive jam [Normal-2 Gate-Next]
74	11441320	Stay jam	Stay jam [Normal-2 Count-2]



75	11441321	Not arrive jam	Not arrive jam [Normal-2 Count-2]
76	1144142B	Wrong stacker	Wrong stacking [Normal-2 Remain-1A]
77	1144152B	Wrong stacker	Wrong stacking [Normal-2 Remain-2B]
78	1144162B	Wrong stacker	Wrong stacking [Normal-2 Remain-1A]
79	1144172B	Wrong stacker	Wrong stacking [Normal-2 Remain-2B]
80	221014A0	Counting data error	Counting error[Exp Remain-1A]
81	221015A0	Counting data error	Counting error[Exp Remain-2B]
82	221016A0	Counting data error	Counting error[Exp Remain-1A]
83	221017A0	Counting data error	Counting error[Exp Remain-2B]
84	2220142C	Not batch	Number of batches not reached [Exp Remain-1A]
85	2220152C	Not batch	Number of batches not reached [Exp Remain-2B]
86	2220162C	Not batch	Number of batches not reached [Exp Remain-1A]
87	2220172C	Not batch	Number of batches not reached [Exp Remain-2B]
88	22203001	Cover is open	Door is open [Exp Cover Switch]
89	22300213	Response time out	Response time out [S/C↔P/C (CAN)]
90	22300214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
91	22401020	Stay jam	Stay jam [Exp Gate-2]
92	22401021	Not arrive jam	Not arrive jam [Exp Gate-2]
93	22401120	Stay jam	Stay jam [Exp Count-1]
94	22401121	Not arrive jam	Not arrive jam [Exp Count-1]
95	22401220	Stay jam	Stay jam [Exp Gate-Next]
96	22401221	Not arrive jam	Not arrive jam [Exp Gate-Next]
97	22401320	Stay jam	Stay jam [Exp Count-2]
98	22401321	Not arrive jam	Not arrive jam [Exp Count-2]
99	2240142B	Wrong stacker	Wrong stacking [Exp Remain-1A]
100	2240152B	Wrong stacker	Wrong stacking [Exp Remain-2B]
101	2240162B	Wrong stacker	Wrong stacking [Exp Remain-1A]
102	2240172B	Wrong stacker	Wrong stacking [Exp Remain-2B]
103	321014A0	Counting data error	Counting error[Exp Remain-1A]
104	321015A0	Counting data error	Counting error[Exp Remain-2B]
105	321016A0	Counting data error	Counting error[Exp Remain-1A]
106	321017A0	Counting data error	Counting error[Exp Remain-2B]
107	3220142C	Not batch	Number of batches not reached [Exp Remain-1A]
108	3220152C	Not batch	Number of batches not reached [Exp Remain-2B]
109	3220162C	Not batch	Number of batches not reached [Exp Remain-1A]
110	3220172C	Not batch	Number of batches not reached [Exp Remain-2B]
111	32203001	Cover is open	Door is open [Exp Cover Switch]
112	32300213	Response time out	Response time out [S/C↔P/C (CAN)]
113	32300214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
114	32401020	Stay jam	Stay jam [Exp Gate-2]
115	32401021	Not arrive jam	Not arrive jam [Exp Gate-2]
116	32401120	Stay jam	Stay jam [Exp Count-1]

117	32401121	Not arrive jam	Not arrive jam [Exp Count-1]
118	32401220	Stay jam	Stay jam [Exp Gate-Next]
119	32401221	Not arrive jam	Not arrive jam [Exp Gate-Next]
120	32401320	Stay jam	Stay jam [Exp Count-2]
121	32401321	Not arrive jam	Not arrive jam [Exp Count-2]
122	3240142B	Wrong stacker	Wrong stacking [Exp Remain-1A]
123	3240152B	Wrong stacker	Wrong stacking [Exp Remain-2B]
124	3240162B	Wrong stacker	Wrong stacking [Exp Remain-1A]
125	3240172B	Wrong stacker	Wrong stacking [Exp Remain-2B]
126	421014A0	Counting data error	Counting error[Exp Remain-1A]
127	421015A0	Counting data error	Counting error[Exp Remain-2B]
128	421016A0	Counting data error	Counting error[Exp Remain-1A]
129	421017A0	Counting data error	Counting error[Exp Remain-2B]
130	4220142C	Not batch	Number of batches not reached [Exp Remain-1A]
131	4220152C	Not batch	Number of batches not reached [Exp Remain-2B]
132	42203001	Cover is open	Door is open [Exp Cover Switch]
133	42300213	Response time out	Response time out [S/C↔P/C (CAN)]
134	42300214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
135	42401020	Stay jam	Stay jam [Exp Gate-2]
136	42401021	Not arrive jam	Not arrive jam [Exp Gate-2]
137	42401120	Stay jam	Stay jam [Exp Count-1]
138	42401121	Not arrive jam	Not arrive jam [Exp Count-1]
139	42401220	Stay jam	Stay jam [Exp Gate-Next]
140	42401221	Not arrive jam	Not arrive jam [Exp Gate-Next]
141	42401320	Stay jam	Stay jam [Exp Count-2]
142	42401321	Not arrive jam	Not arrive jam [Exp Count-2]
143	4240142B	Wrong stacker	Wrong stacking [Exp Remain-1A]
144	4240152B	Wrong stacker	Wrong stacking [Exp Remain-2B]
145	4240162B	Wrong stacker	Wrong stacking [Exp Remain-1A]
146	4240172B	Wrong stacker	Wrong stacking [Exp Remain-2B]
147	521014A0	Counting data error	Counting error[Exp Remain-1A]
148	521015A0	Counting data error	Counting error[Exp Remain-2B]
149	521016A0	Counting data error	Counting error[Exp Remain-1A]
150	521017A0	Counting data error	Counting error[Exp Remain-2B]
151	52203001	Cover is open	Door is open [Exp Cover Switch]
152	52300213	Response time out	Response time out [S/C↔P/C (CAN)]
153	52300214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
154	52401020	Stay jam	Stay jam [Exp Gate-2]
155	52401021	Not arrive jam	Not arrive jam [Exp Gate-2]
156	52401120	Stay jam	Stay jam [Exp Count-1]
157	52401121	Not arrive jam	Not arrive jam [Exp Count-1]
158	52401220	Stay jam	Stay jam [Exp Gate-Next]

159	52401221	Not arrive jam	Not arrive jam [Exp Gate-Next]
160	52401320	Stay jam	Stay jam [Exp Count-2]
161	52401321	Not arrive jam	Not arrive jam [Exp Count-2]
162	5240142B	Wrong stacker	Wrong stacking [Exp Remain-1A]
163	5240152B	Wrong stacker	Wrong stacking [Exp Remain-2B]
164	5240162B	Wrong stacker	Wrong stacking [Exp Remain-1A]
165	5240172B	Wrong stacker	Wrong stacking [Exp Remain-2B]
166	621014A0	Counting data error	Counting error[Exp Remain-1A]
167	621015A0	Counting data error	Counting error[Exp Remain-2B]
168	621016A0	Counting data error	Counting error[Exp Remain-1A]
169	621017A0	Counting data error	Counting error[Exp Remain-2B]
170	62203001	Cover is open	Door is open [Exp Cover Switch]
171	62300213	Response time out	Response time out [S/C↔P/C (CAN)]
172	62300214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
173	62401020	Stay jam	Stay jam [Exp Gate-2]
174	62401021	Not arrive jam	Not arrive jam [Exp Gate-2]
175	62401120	Stay jam	Stay jam [Exp Count-1]
176	62401121	Not arrive jam	Not arrive jam [Exp Count-1]
177	62401220	Stay jam	Stay jam [Exp Gate-Next]
178	62401221	Not arrive jam	Not arrive jam [Exp Gate-Next]
179	62401320	Stay jam	Stay jam [Exp Count-2]
180	62401321	Not arrive jam	Not arrive jam [Exp Count-2]
181	6240142B	Wrong stacker	Wrong stacking [Exp Remain-1A]
182	6240152B	Wrong stacker	Wrong stacking [Exp Remain-2B]
183	6240162B	Wrong stacker	Wrong stacking [Exp Remain-1A]
184	6240172B	Wrong stacker	Wrong stacking [Exp Remain-2B]
185	721014A0	Counting data error	Counting error[Exp Remain-1A]
186	721015A0	Counting data error	Counting error[Exp Remain-2B]
187	721016A0	Counting data error	Counting error[Exp Remain-1A]
188	721017A0	Counting data error	Counting error[Exp Remain-2B]
189	72203001	Cover is open	Door is open [Exp Cover Switch]
190	72300213	Response time out	Response time out [S/C↔P/C (CAN)]
191	72300214	Failed to connect	Failed to connect [S/C↔P/C (CAN)]
192	72401020	Stay jam	Stay jam [Exp Gate-2]
193	72401021	Not arrive jam	Not arrive jam [Exp Gate-2]
194	72401120	Stay jam	Stay jam [Exp Count-1]
195	72401121	Not arrive jam	Not arrive jam [Exp Count-1]
196	72401220	Stay jam	Stay jam [Exp Gate-Next]
197	72401221	Not arrive jam	Not arrive jam [Exp Gate-Next]
198	72401320	Stay jam	Stay jam [Exp Count-2]
199	72401321	Not arrive jam	Not arrive jam [Exp Count-2]
200	7240142B	Wrong stacker	Wrong stacking [Exp Remain-1A]

201	7240152B	Wrong stacker	Wrong stacking [Exp Remain-2B]
202	7240162B	Wrong stacker	Wrong stacking [Exp Remain-1A]
203	7240172B	Wrong stacker	Wrong stacking [Exp Remain-2B]

## 6.2. Causes and solutions of major problems

### ► If the device does not run

Most devices are not moving.

First of all, check whether the power of the device is on (pocket FND is on).

#### 1) When power is on

- Is the cover of the device open?  
→ Close the device's cover and run it again.
- Is there something wrong with the device?  
→ Check whether there are any problems with each device including motors by checking the device.

Please refer to [Motor Test, check unit operation](#) of '6.3. Device Check'.

#### 2) When power is not on

- Is the power cord plugged in correctly?
- Is the power switch in the ON position?

If all of the above checklists have no problems, check the following.

- Is the power cable disconnected?
- Is the inlet fuse disconnected?
- Is the switching mode power supply (SMPS) in a normal state?

### ► In the event of jam

It is the case where the note does not move normally in the device and is stuck in a certain part, or it cannot reach the specified position within the normal time. The most common paper jams are Stay Jam and Not Arrive Jam.

(1) Stay Jam: This is physical paper jam which refers to the case where the note is stuck in a certain section and stays longer than a certain period of time.


(2) Not Arrive Jam: This is no physical paper jam but is detected by software. It means that the note arrives earlier or later than a certain time based on a specific sensor.

Other paper jams include Hopper Jam and Insert Jam.

In the event of paper jam, check the following.

- 1) When paper jam occurs, an error screen appears (see [error processing](#)).

If you press the **[Position]** button on the error screen, the position where the paper jam occurred is displayed.

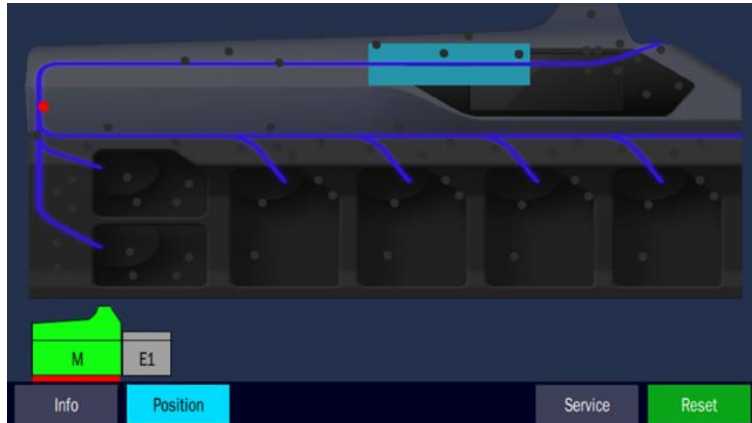

- 2) Remove the jammed note carefully to avoid damaging it.
- 3) Open the main cover and remove all the notes in the transfer section.
- 4) Open the top cover and remove the note inside.
- 5) When you open the top cover, there is a Reco unit on the right inside.  
Open the cover of the Reco unit and remove any note inside.
- 6) After removing all visible notes, close all the covers and press the **[Reset]** button.  
As the motor is running, all remaining notes in the transfer section move to a defined pocket, and the error is resolved when all of the internal notes is removed.
- 7) If the error is not resolved because all the notes are not removed, press the **[Reset]** button 2 or 3 times to process again.

### ► When a large amount of reject occurs

Reject may be caused by a number of causes, and a reject does not necessarily mean a problem with the device.

However, if a large amount of reject occurs, you must identify the cause of the reject as there may

be a problem with the device.

- 1) When reject occurs, the **[REJ]** button is activated at the bottom left of the screen.

Clicking this button brings up the Reject-REASON window.



- 2) In the Reject-Reason window, you can check the Reject code, Reject Reason, and Reject Count. Among them, you need to examine the reason for reject of the item with great number of count.

Reject Reason			
Reject Code	Reject Reason	Count	
0x0311	SN Denom Reco. Fail	5	All
0x0218	Image out of scan area Error Left	2	Reject1
0x0401	Not Matching Size	2	Reject2
0x0501	Suspect(MG)	2	
0x0504	Suspect(IRT)	2	
			Back

- **When the note is not inserted into the device (Insert Chain)**

The note stacked in the hopper is automatically inserted into the device and passes through the Insert Sensor.

If the note is loaded in the hopper but does not reach the insert sensor in time, check the following.

- (1) **Problems depending on the insert state:** This is the case where the note insert interval is narrowed and reject occurs because the notes are not inserted properly.
- Check and adjust the spacing of the insert unit.
  - Arrange the notes well in the insert section and stack them.
  - Check if the pusher operates normally when a small amount of notes is inserted into the hopper.
    - If there is a problem with the operation, check whether it operates normally by selecting the "Pusher" item from the [Motor Test](#) and [Unit Test](#) menus.

- (2) **Problems due to the condition of notes:** If the inserted banknote is damaged or in a bad condition, reject occurs because the feed is not smooth.
- Avoid using notes that are excessively damaged or in poor condition.
  - If it is unavoidable, please arrange the notes as well as possible.

**Caution**

Heavily damaged notes may cause paper jam and poor stacking.

- (3) **Problems caused by the insert motor and roller:** This is the case where the speed of the insert motor is too fast or too slow, causing reject.
- Check and adjust the speed (number of revolutions) of the insert motor. Select "Insert Motor" in Motor Test menu to check if the motor operation is normal (Normal/abnormal is displayed in the check result).
  - Press [Control Parameter] in the 'Service' menu [Device] and adjust the value of the "Input Motor Fine Turning" item.
    - ※ Refer to the [Control Parameter](#) section.
    - If you increase the note spacing in this item, you can facilitate the feeding. However, the number of input notes per hour (sheets/minute) decreases.

- **When multiple notes are fed at once (Double, poor feed)**

- Check if the gap of the hopper is too wide.
  - Turn the gap adjustment lever in the (+) or (-) direction to adjust.
- Even when a new bundle of banknotes is fed, there may be poor feed.
  - You can reduce the poor feed by shaking banknotes well.

- **When reject occurs by Reco**

This can be solved by adjusting the Reco Parameter or cleaning dust.



- When Reco reject occurs, the following reasons for reject appear.  
Invalid Size, Reco Chain, Too Close 2nd Candi, Suspect IRT/IRR/UV/MG and  
Misrecognition with tape (or bad tape detection), Double (double due to US detection).
  - Click [Sensor Calibration] in [Reco] of the 'Service' menu to automatically  
calibrate the Reco sensor (CIS, UV, US, MG).
    - ※ Refer to [Sensor Calibration](#) section.
  - Adjust [Reco Parameter] to improve the cause of reject.
    - ※ Refer to [Reco Parameter](#) section.
  
- ※ If the problem is not resolved and reject occurs continuously, please contact the A/S  
center (<https://help.kisane.com/> or [overseas@kisane.com](mailto:overseas@kisane.com)).

## ► Fly-Out

The counted notes should be loaded in a pocket and easily removed by the user.

Check the following if the notes are not loaded properly to the bottom of the pocket due to problems such as jamming or flying out while the notes are coming out of the pocket.

- (1) **Problems caused by the insert status:** This is a case where the note is not normally separated and inserted at regular intervals. This may happen if the note is not inserted correctly or if the note spacing is narrow.
  - Check and adjust the gap of the insert unit.
  - Arrange the note of the hopper well and load it.
  - Check if the pusher operates normally when a small amount of notes is inserted into the hopper.
    - If there is a problem with the operation, check whether it operates normally by selecting the "Pusher" item from the Motor Test and Unit Test menus.
  
- (2) **Problems due to the condition of notes:** If the inserted banknotes are damaged or in a bad condition, there is a problem because the feed is not smooth.
  - Avoid using notes that are excessively damaged or in poor condition.
  - If it is unavoidable, please arrange the notes as well as possible.

**Caution**

Heavily damaged notes may cause paper jam and poor loading.

- (3) **Problems due to the operation status of the spool motor:** A problem occurs when the speed of the spool motor is too fast or too slow than the normal speed.
  - Check and adjust the speed (number of revolutions) of the spool motor.
    - Check if the motor operation is normal by selecting the "Spool Motor" from the [Motor Test](#) menu. (Normal/abnormal is displayed in the check result).
  - Adjust the control parameters of the spool motor.
    - Press [Control Parameter] in the 'Service' menu [Device] and adjust the value of the "Spool Motor Fine Turning" item.
    - If a specific spool motor does not work, contact the A/S center (<https://help.kisane.com/> or [overseas@kisane.com](mailto:overseas@kisane.com)).

▶ **Strapper error**

- **Binding paper jam occurs**
  - Cause : If the binding paper is wrinkled or torn.
  - Solution : Remove the wrinkled or torn binding paper with scissors and then reinstall the clean strip.
- **CUTTER does not work normally**
  - Cause : There is a foreign substance between the cutters.
  - Solution : Re-apply the specified grease between cutters.  
(SHINETSU KF-96-SPRAY)
- **Printing Poor print quality**
  - Cause : INK discharge hole is clogged
  - Solution : Wipe the INK discharge hole with a tissue

- It is prohibited to reprint all of the content of this book partially without permission.
- The content of this book might change without a previous notice in the future.
- This manual can be exchanged if pages are the incorrect collating and the missing.



## K6

---

User Manual

Published on February, 2021

No part of the contents of this book may be reproduced or transmitted in any form or by any means without the written permission of the publisher.

ALL RIGHTS RESERVED.

---

Seongsui-ro 20-gil 35, Seongdong-gu, Seoul, 04787, Korea

TEL: 81-2-2204-7890, E-mail: [info@kisane.com](mailto:info@kisane.com)

[www.kisane.com](http://www.kisane.com)